PRICE $5.00

K6

POWER SUPPLY

VOLTAGE/CURRENT REGULATED
POWER SUPPLY

MODEL CK 36-1.5M

SERIAL NO. H-40162
ASSET # 9020

INSTRUCTION MANUAL

kepco inc.®

131-38 SANFORD AVENUE • FLUSHING, N. Y. 11352
Area Code 212 IN 1-7000 • TWX # 212-539-6623

INSTRUCTION MANUAL

VOLTAGE/CURRENT REGULATED
POWER SUPPLY

MODEL CK 36-1.5M

SERIAL NO. H-4016Z
ASSET # 9020

TABLE OF CONTENTS

Section		Page No.
1.0	SPECIFICATIONS AND DESCRIPTIONS	
1.1	Electrical and Physical Specifications.....	1.1-1
1.2	Terminals and Controls.....	1.2-1
1.3	Special Features.....	1.3-1
2.0	OPERATING INSTRUCTIONS	
2.1	Installation and Operating Instructions.....	2.1-1
2.2	Special Operating Procedures.....	2.2-0
	Remote Error Sensing.....	2.2-1
	Programming Output Voltage With External Resistance..	2.2-2
	Programming Output Voltage With External Voltage.....	2.2-3
	Programming Output Current With External Resistance..	2.2-5
	Programming Output Current With External Voltage.....	2.2-6
	Programming Output Current With External Sensing.....	2.2-7
	Parallel Operation (Master-Slave).....	2.2-9
2.3	Internal Adjustment Procedures.....	2.3-1
3.0	Circuit Description.....	3.1-1
4.0	Power Supply Measurements.....	4.1-1
	REPLACEMENT PARTS	
	SCHEMATIC DIAGRAM	

©KEPCO, INC. 1963

STANDARD POLICY COVERING REPRODUCTION AND USE OF TECHNICAL DATA FOR KEPCO MANUFACTURED EQUIPMENT

The technical data submitted, including manuals, parts information, and mechanical and electrical drawings, is furnished solely for the purpose of effecting maintenance and/or repairs to the apparatus therein described and the purchaser or the Government shall not reproduce, use, or disclose the said technical data, in whole or in part, for any other purpose. Such technical data shall not be used for promotional procurement, development or manufacturing purposes, nor shall the purchaser or the Government permit the reproduction, use, or disclosure of any part of said technical data by others. The purchaser shall notify the Government of the purchaser's limited right in the use of said technical data for aforesaid purposes. In the event that any part of this technical data is used by anyone for other than the above authorized purposes, the purchaser will give all assistance possible for the prosecution of action against any unauthorized use thereof.

1.1 ELECTRICAL AND PHYSICAL SPECIFICATIONS

The Model CK 36-1.5M is a DC Power Supply that provides highly regulated voltage or current with continuous high resolution adjustments in either mode of operation. Automatic crossover between constant voltage and constant current is provided with a panel indication of the specific operating mode. Accessible terminals enable remote connections for programming or system interconnections with other devices. Built as a portable, bench mounted power supply, this model may be easily rack mounted with available rack adapters. Built-in forced air cooling with lateral circulation provides positive cooling for continuous operation at any output within the specified ranges.

....DC OUTPUT: 0-36 volts, continuously adjustable;
resolution: 0.05% of maximum output.
0-1.5 amperes, continuously adjustable;
resolution: 0.05% of maximum output.

....AC INPUT: 105-125 (210-250) volts, 50-65 cps, single phase. 1.5 amperes at 125 VAC. 0.8 ampere at 250 VAC.

....CONTROL RATIO: 1000 ohms/volt.

....BRIDGE CURRENT: 1 milliampere.

AUTOMATIC CROSSOVER

VIX INDICATORS:

A pair of front-panel signal lamps. One lamp is lighted during voltage regulated operation, the other during current regulated operation (internal current sensing only). Crossover from one mode to the other is signalled by the extinction of one lamp and the lighting of the other.

VIX REMOTE SIGNAL:

A pair of rear-panel pin jacks, labelled "V" and "I". Pin V is 8 volts positive with respect to pin I during voltage regulated operation. Pin I is 8 volts positive with respect to pin V during current regulated operation. Maximum loading 10 K ohms; must be isolated from ground and the output terminals of the power supply. Crossover from one mode to the other is signalled by an abrupt polarity reversal.

....ISOLATION: Units can be connected in series up to 500 volts between chassis and either output terminal.

CONSTANT VOLTAGE OPERATION:

....LINE REGULATION: Less than 0.01% output voltage change for 115 ± 10V or 230 ± 20V AC line variation, at any output voltage within the specified range.

....LOAD: Less than 0.01% or 0.5 millivolt output voltage change, whichever is greater for NO LOAD to FULL LOAD change at any output voltage within the specified range.

....STABILITY: Output varies less than 0.01% or 2 millivolts whichever is greater over a period of 8 hours after warmup. Measured at constant line voltage, load and ambient temperature.

....RIPPLE: Less than 0.5 millivolt rms.

....OUTPUT IMPEDANCE: Less than 0.0024 ohm, DC to 100 cps; 0.02 ohm, 100 cps to 1 KC; 0.08 ohm + 0.8 μh, 1 KC to 100 KC.

....RECOVERY TIME: 50 microseconds.

....AMBIENT OPERATING TEMPERATURE: -20°C to +50°C maximum.

....TEMPERATURE COEFFICIENT: Output voltage changes less than 0.01% per °C.

CONSTANT CURRENT OPERATION: (External Sensing)

....CURRENT REGULATED OUTPUT RANGE: 1 milliampere to 100% of maximum rated current.

....VOLTAGE COMPLIANCE: 100% of maximum output voltage (For any selected current value the output voltage is automatically varied from 0 to 100% of maximum output voltage, as required to regulate the output current).

....CURRENT REGULATION:
LINE: Less than 0.01% output current change for 115V ± 10V or 230V ± 20V AC line variation, at any output current within the current regulated range.

LOAD: Less than 0.02% output current change, for maximum change in load resistance at any output current within the current regulated range.

....CURRENT RIPPLE: Less than 0.05% of maximum current rms.

....CURRENT SENSING SAMPLE: 1.0 volt across external resistance .

CONSTANT CURRENT OPERATION: (Internal Sensing)

....CURRENT REGULATED OUTPUT RANGE: Panel controls provide automatic cross over from constant voltage to constant current from less than 0.2% to 100% of the maximum specified current.

CONSTANT CURRENT OPERATION: (Internal Sensing)

....CURRENT REGULATED OUTPUT RANGE: Panel controls provide automatic cross-over from constant voltage to constant current from less than 0.2% to 100% of the maximum specified current.

....VOLTAGE COMPLIANCE: From 0 volts to the voltage control setting.

....CURRENT REGULATION:
LINE: Less than 0.02% or 0.2 milliampere output current change for 115V ± 10V or 230V ± 20V AC line variation at any output current within the current regulated range.

LOAD: Less than 0.02% or 0.2 milliampere output current change for maximum change in load resistance at any output current within the current regulated range.

....CURRENT RIPPLE: Less than 0.05% of maximum current, rms.

....CURRENT SENSING SAMPLE; Vs: 1.0 volt across internal sensing resistance.

PHYSICAL SPECIFICATIONS:

....DIMENSIONS: 4 1/4"H X 8 5/32"W X 13"D (behind rack adapter), 13 5/8" overall.

....WEIGHT: 25 pounds.

....FINISH: Panel, etched aluminum brushed and coated. Case, Kepco hammertone gray.

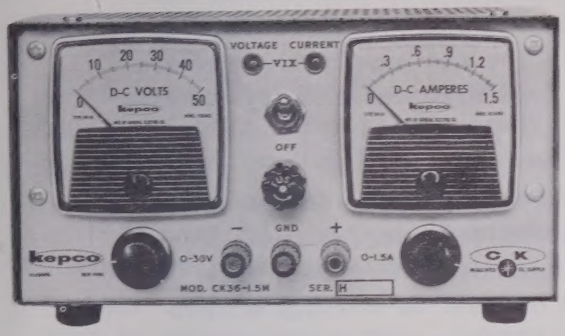

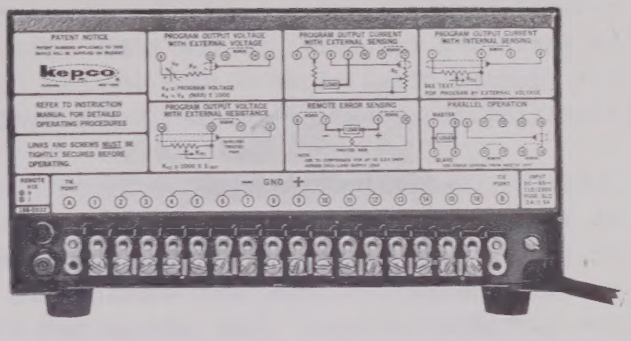
PATENT NOTICE
kepco
REFER TO INSTRUCTION MANUAL FOR DETAILED OPERATING PROCEDURES
LINKS AND SCREWS MUST BE TIGHTLY SECURED BEFORE OPERATING.
PROGRAM OUTPUT VOLTAGE WITH EXTERNAL VOLTAGE
PROGRAM OUTPUT CURRENT WITH EXTERNAL SENSING
PROGRAM OUTPUT CURRENT WITH INTERNAL SENSING
PROGRAM OUTPUT VOLTAGE WITH EXTERNAL RESISTANCE
REMOTE ERROR SENSING
PARALLEL OPERATION
GND

1.2 TERMINALS AND CONTROLS

....POWER: Toggle switch turns power on.

....FUSE: Fuse on front panel protects input to power transformer supplying all internal circuit voltages.

....VOLTAGE ADJUST: Ten-turn control on front panel for setting the output voltage.

....CURRENT ADJUST: Ten-turn control on front panel for setting the output current.

....INDICATORS: VIX indicators to display voltage or current operating mode.

....OUTPUT TERMINALS: Heavy duty binding posts with 3/4" spacing for output and ground connection.

On Back of Unit:

....CONTROL TERMINAL STRIP: Sixteen terminal barrier strip for connections to circuit terminals required for special operating applications along with output and ground connections.

....VIX CONNECTORS: Connecting pin jacks (.08") for remote circuit operation of current/voltage operating mode indicators or process control.

....AC INPUT LINE CORD: Flexible, three-wire line cord with grounding plug for connection to AC line. Third wire in cord is grounded to chassis connector similiar to Hubbel type #5266.

1.3 SPECIAL FEATURES

REMOTE ERROR SENSING. - External error sensing terminals located on the control terminal strip allow the error sensing of the output voltage to be performed remotely at the load. This enables the supply to regulate for voltage drops of up to 0.5 volt in each load wire and thereby provide specified regulation directly at the load.

CONSTANT VOLTAGE/CONSTANT CURRENT OUTPUT. - The output may be operated at either constant regulated voltage or constant current. Output controls on front panel enables setting of the automatic crossover from constant voltage to constant current at any current or voltage within the specified ranges. Rear access jacks provide connection to internal control circuits for remote indication of voltage or current mode operation and for control applications. A remote VIX accessory unit is available for connection to these jacks.

CONSTANT CURRENT OPERATION (External Sensing) - By the use of a current sensing resistor of optimum value and a current control resistor, both externally connected, the output can be converted to provide constant current only through a varying load.

PROGRAMMING BY RESISTANCE. - The output voltage can be programmed or controlled remotely by an externally connected resistance. The externally connected resistance will program the output voltage at a constant resistance-to-voltage ratio of 1000 ohms-per-volt over the entire specified range of the unit.

PROGRAMMING BY VOLTAGE. - The output voltage can be programmed by another voltage, for special programming application such as Complementary Tracking, Compliance Voltage Extension for Constant Current, etc.

PROGRAMMING CURRENT. - The constant output current function with internal sensing can be programmed by an external signal, either voltage or resistance.

PARALLEL OPERATION. - The output of two Model CK units can be connected in parallel across a common load to obtain higher current. Special terminals in the Pass Driver control circuit allow the series pass elements to be parallel driven by a common control signal, automatically providing equal distribution of the current drawn from each supply. Automatic paralleling by means of the crossover characteristic is also possible with no special interconnection.

OVERLOAD PROTECTION. - Current limiting automatically limits the output current during overload to the value at which the Current Control is set. In the (internal sensing) constant current mode, voltage limiting automatically limits the output voltage during overload (open circuit) to the value at which the voltage control is set. This allows the supply to continue operating, without damage and without shutting off, during an output overload up to a full short circuit or open circuit.

2.1 INSTALLATION AND OPERATING INSTRUCTIONS

This Power Supply has been completely inspected and tested at the factory prior to packing, and is shipped ready for installation and operation.

AC POWER. - The Supply is equipped with a three-wire safety line cord and polarized plug. The third (green) wire in the cord, connected to the grounding pin on the plug, is connected to the case and chassis. When using the two-prong receptacle adapter, the green pigtail wire attached thereto must be suitable grounded in order to ground the power supply. The Power Supply is normally shipped for 115 volt operation with appropriate fusing. For 230 volt line input, the power transformer primary windings must be series connected. Remove Power Supply case and locate primary terminals at underside of unit. Connect jumpers as shown on diagram for required input voltage.

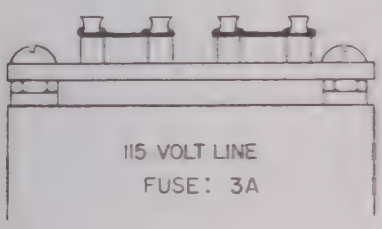

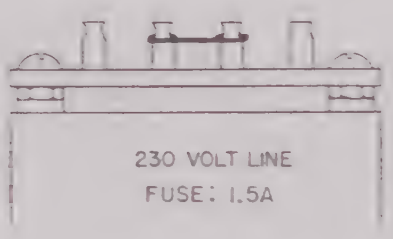

GROUNDING. - The DC output is isolated from the AC power line and from any direct connection to chassis or ground. The positive side of the output is connected to chassis through a capacitor in series with a resistor. The maximum voltage that can be supported between either output terminal and chassis ground is 500 volts. Either side of the DC may be grounded. Grounding connection is provided at the panel binding post or rear terminal strip.

DC LOAD TERMINALS. - The load may be connected to either the front panel binding posts or to the rear terminal strip. The connecting leads should be carefully constructed, keeping in mind the voltage drops that can develop at the high current with wires of insufficient size or poor terminal connections. (See Remote Error Sensing).

COOLING. - The power transistor and rectifier assembly is maintained within proper operating temperatures by a built-in fan which circulates air laterally through the unit. Be sure all panel openings are clear to permit proper circulation of air.

STANDARD OPERATION. - The supply is shipped with six removable jumper links in place between terminals (2)-(3), (4)-(5), (6)-(7), (9)-(10), (11)-(12), (13)-(14), and (15)-(16), on the 16-terminal control terminal strip at the back of the unit. These links must all be in place for standard operation.

> NOTE: The terminal screws and links should be tight to insure proper operation. A loose wire connection or jumper link can cause the unit to function improperly. Be sure to put any links that have been removed back in place when changing from one mode of operation to another.

TURN ON. - The Supply may be turned on and off with the front panel Voltage and Current controls turned to any settings without any precaution.

SETTING OUTPUT VOLTAGE AND CURRENT. - Output voltage and current are both independently adjustable by means of the appropriately labeled front panel controls depending upon the load resistance, only one of these adjustments will exercise control. When the VOLTAGE VIX lamp is lit, the voltage control adjustment will control the voltage to the load and the Power Supply will operate as a voltage regulator. When the CURRENT VIX lamp is lit the current control adjustment will control the current through the load and the Power Supply will operate as a current regulator. In either mode the "other" control will have no effect on the output except to act as a limit.

In voltage regulation mode, load current increases with decreasing load resistance until the setting of the current control adjustment has been reached. At this point the Power Supply will crossover into current regulation mode. The voltage VIX lamp is extinguished and the current VIX lamp is lighted.

In current regulation mode, load voltage increases with increasing load resistance until the setting of the voltage control adjustment has been reached. At this point the Power Supply will crossover into voltage regulation mode. The current VIX lamp is extinguished and the voltage VIX lamp is lighted.

If crossover is not desired within the rated output voltage and current range of the power supply, the inoperative control should be set fully clockwise so that its limiting point is outside of the operating range. In practice, set the controls so that the desired VIX lamp remains lighted throughout the entire range of desired loads.

2.2 SPECIAL OPERATING PROCEDURES

Complete accessibility to the power supply's internal control elements is provided by the 16-terminal connector at the rear of the unit. On the following pages of this section are described a group of special connections that enable control of the power supply by external means.

Included herewith is a simplified diagram of the basic internal control circuits shown in relation to the accessible terminal connections for ease in understanding the overall operation.

SIMPLIFIED DIAGRAM OF MODEL CK AUTO-CROSSOVER POWER SUPPLY

WITH REAR TERMINAL CONNECTION DETAIL

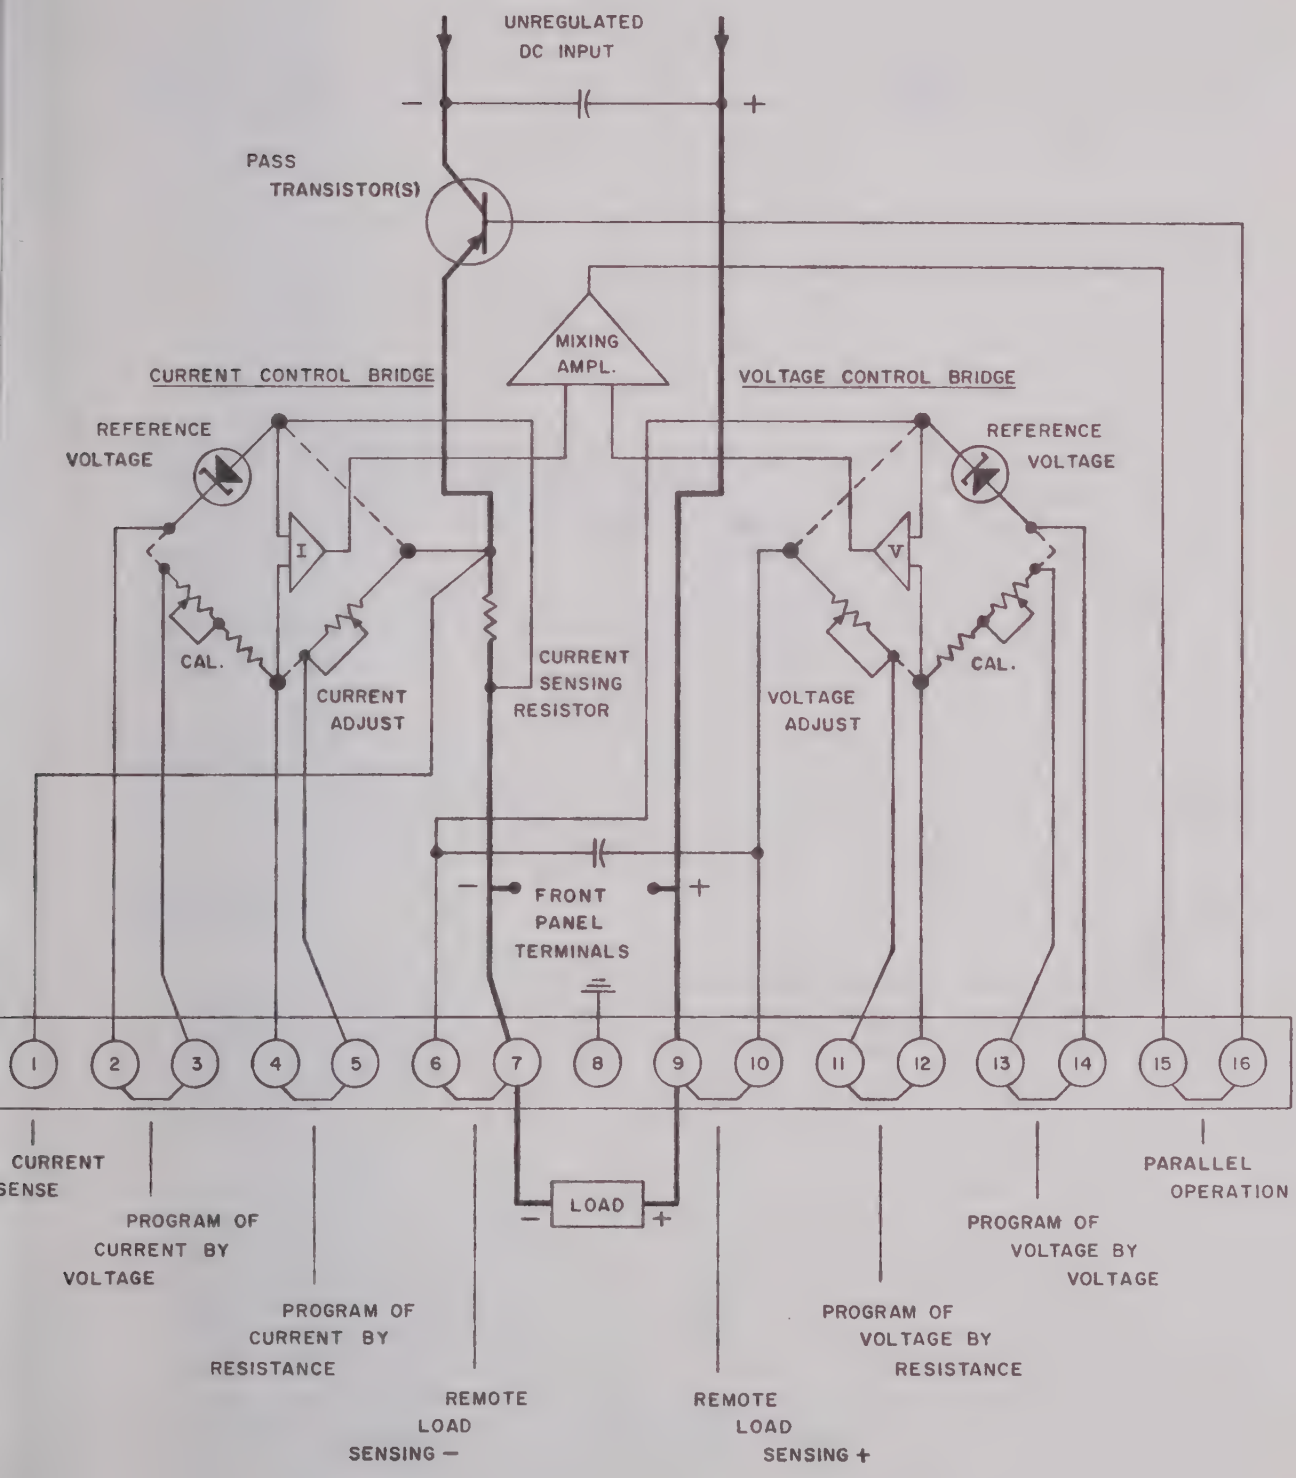

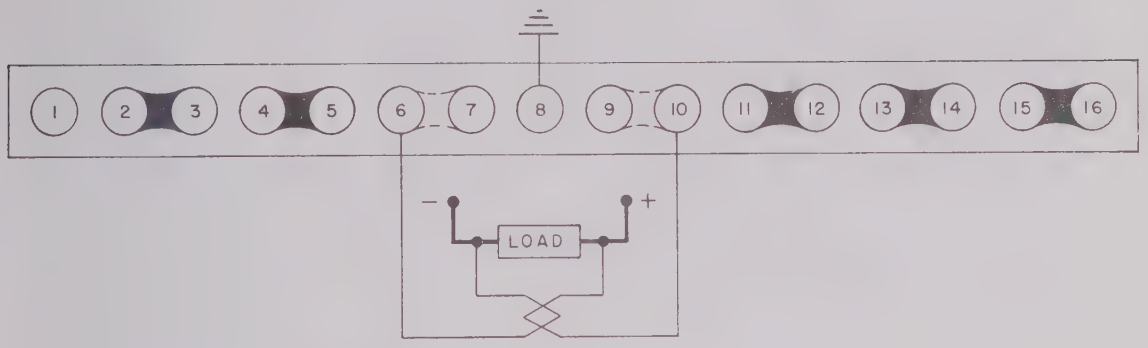

Shielded Twisted Pair

The Error Sensing terminals are the input terminals to the Supply's regulating system for sensing changes or errors in the output voltage being regulated. Normally, the Error Sensing is connected to sense the output voltage directly at the rear output terminals. Connected in this manner, specified regulation will appear at these terminals while the voltage at the load will be reduced by voltage drops due to the resistance in the wires between the output terminals and the load.

The Error Sensing input can be connected to sense the voltage directly at the load, thereby maintaining optimum regulation at the load instead of at the Supply's terminals. Up to 0.5 volts drop in each load connecting lead can be compensated by using Remote Error Sensing.

PROCEDURE:

1. Remove the two Remote Error Sensing jumper links connected between terminals (6)-(7) and (9)-(10) at the back of the unit. These links provide error sensing of the voltage at the Supply's terminals and must be in place when Remote Error Sensing is not used.

2. Using a twisted wire pair, separated from the main load connecting wires, connect the Error Sensing terminals (6) and (10) to the DC terminals at the load. Be sure to maintain polarity, i.e., connect the Positive Error Sensing (10) to the positive side of the load, and Negative Error Sensing (6) to the negative side of the load. The Remote Sensing wires are used to transmit voltage only and do not carry load current. There is a constant current (bridge current) flowing through the Remote Sensing wires.

   NOTE: The unit should never be allowed to operate with an open circuit between the Remote Error Sensing terminal and its respective output terminal. An open connection

will degrade the regulating function and cause the output voltage to rise. A pair of diodes internally bridge the error sensing connections, limiting the output voltage rise to approximately 1.5 volts. Output ripple is increased sharply, also.

When operating the power supply with remote error sensing, do not permit the load connecting wires to become disconnected from the load while the error sensing leads remain connected. If this occurs, the power supply will attempt to maintain current flow through the sensing lead and damage to the power supply may result.

Twisted wires for the load connecting leads should be used to reduce transient recovery time and enhance stability of operation.

PROGRAMMING OUTPUT VOLTAGE WITH EXTERNAL RESISTANCE

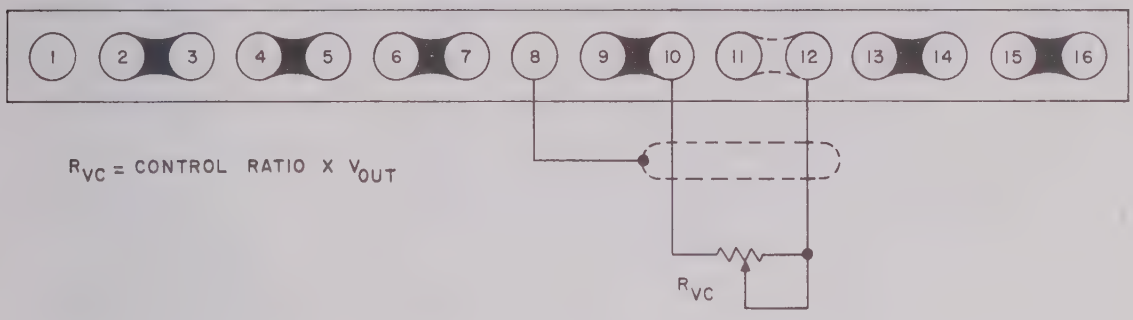

The output voltage may be programmed, or controlled, over its entire range by means of an externally connected resistance. The external control may be continuously adjustable or stepped, and may be remotely located. When connected, it will function in place of the front panel Voltage Adjust control.

The static, or steady state, current through the programming resistance is equal to the bridge current of the model: the reciprocal of the programming ratio, or 1 ma for 1000 ohm/volt units, 10 ma for 100 ohm/volt units.

The external resistance will control the output voltage at an ohm/volt control ratio specified for the Model. The exact control ratio is adjustable a small amount around the specified value in order to permit adjustment for component tolerances. This is done by means of the internal Maximum Voltage Adjust resistor. The control ratio will remain constant over the entire output range of the unit. It is usually adjusted, either for internal or external control, at maximum rated output voltage. (See Internal Adjustment Procedures).

PROCEDURE:

1. Remove the jumper link connected between terminals (11)-(12) on the back of the unit. This disconnects the internal Voltage Adjust control from the circuit.

2. Using shielded, twisted-pair wire, connect the external programming resistance to terminals (10)-(12). Connect the shield to the chassis, terminal (8).

If fixed values of resistance are to be switched for stepping the voltage, the switching device should have shorting contacts (make before break) so the circuit does not open during transfer. Programming large excursions of voltage by switching contacts or other rapid switching means, requires the use of high wattage resistors for the lower voltages that are programmed.

These are necessary to absorb the higher voltage charge stored in the output capacitors. Similarly, manually operated or servo driven potentiometers of low current capacity must be restricted in their speed of rotation by friction or other means to prevent potentiometer burn-out. These precautions are particularly significant when the supply is lightly loaded.

PROGRAMMING OUTPUT VOLTAGE WITH EXTERNAL VOLTAGE

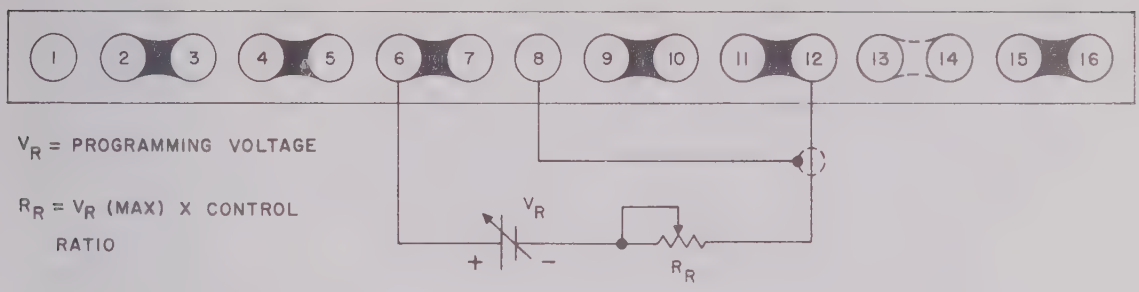

The output voltage of this model can be controlled by an external voltage source. The output voltage of the supply will follow in constant proportion the voltage of the programming source for an approximate 10:1 change in output.

The proportion between the two voltages will be constant, but adjustable. It is determined by the proportion established between the resistance of an added external coupling resistor (R_r) and the resistance at which the output voltage control potentiometer (R_{vc}) is set. The proportion may be set at unity (1:1) in which case the output voltage will be equal to the programming voltage, or it may be set for any other ratio, within the voltage capabilities of the unit.

This mode of programming may be used in conjunction with an external Voltage Control resistance (See Programming Output Voltage by External Resistance) to provide programming control of both the magnitude and the ratio of the voltages.

It is required that the positive side of the programming voltage source be connected to the negative side of the programmed voltage. Also, the programming source must be capable of providing a maximum control current equal to the reciprocal of the control ratio for the Model.

PROCEDURE:

1. The proportion maintained between the output voltage and the programming voltage is expressed very closely by the following:

$$\frac{V_o}{V_r} = \frac{R_{vc}}{R_r}$$

where: V_o = output voltage to be programmed.

V_r = Programming voltage.
R_{vc} = Voltage Control resistance (internal or external).
R_r = External coupling resistor.

2. a. The values of V_o and V_r are usually given by the requirements of the particular application.

   b. The value of R_r is determined by the Control Ratio for the model using the programming voltage at its maximum value:

   $$R_r = V_r \text{ (max.)} \times \text{Control Ratio (ohm/volt)}$$

   c. R_{vc} is equal to V_o X Control Ratio.

3. a. Connect the positive side of the programming voltage (V_r) to terminal (6). Using shielded wire, connect the external coupling resistor (R_r) between the negative side of V_r and terminal (12) on the programmed supply; connect the shield to ground (8).

   b. Remove the jumper link connected between terminals (13)-(14) on the programmed supply.

   c. On the programmed supply set the voltage control (either internal or external) approximately for the maximum value of voltage to be programmed.

   d. Turn on the programmed supply and the programming voltage source. With the programming voltage set to its maximum value, adjust the voltage control on the programmed Power Supply to establish the desired ratio. The programmed output voltage should track variations in the programmed voltage at the proportion established over a range of 10:1 change in output. If a wider range of tracking is desired, it may be necessary to re-establish the ratio of output to control voltage at a lower value.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL RESISTANCE

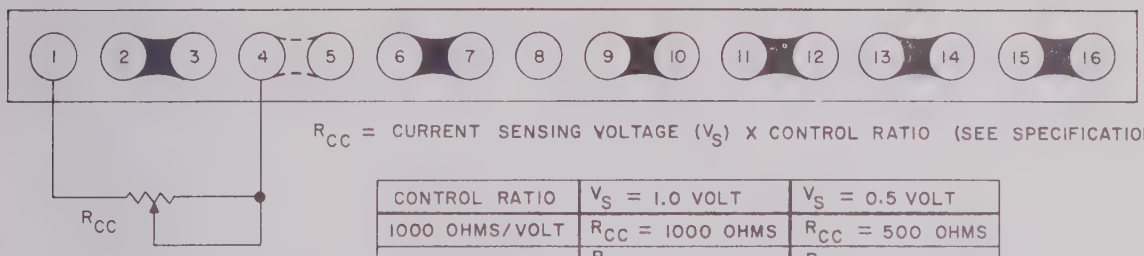

R_{CC} = CURRENT SENSING VOLTAGE (V_S) X CONTROL RATIO (SEE SPECIFICATION)

CONTROL RATIO	V_S = 1.0 VOLT	V_S = 0.5 VOLT
1000 OHMS/VOLT	R_{CC} = 1000 OHMS	R_{CC} = 500 OHMS
100 OHMS/VOLT	R_{CC} = 100 OHMS	R_{CC} = 50 OHMS

In this mode of operation an external resistance is connected to the unit to function as a Current Adjust control in place of the front panel control. The external control may either be fixed, stepped, or continuously variable, and may be located remotely from the Power Supply. If fixed values of resistance are to be switched, for stepping the current, the switching device should have shorting contacts (make before break), so the circuit does not open during transfer.

C A U T I O N

The Current Adjust control on the front panel is set by an internal adjustment so that at its maximum setting the maximum output current will be limited to a value slightly above the rated maximum current for the particular Model. When an external resistance is used it must be similarly adjusted at maximum, and the front panel control readjusted when returning to normal operation. (See Internal Adjustment Procedures)

PROCEDURE:

1. Using shielded, twisted-pair wire, connect external resistance to terminals (1)-(4); connect the shield to ground (8). Remove the jumper connected between terminals (4)-(5); this disconnects the front panel Current Adjust control from the circuit.

2. For continuously variable control, the external resistance should have the range as specified. This will have to be adjusted at the maximum setting before operation.

3. For step function control fixed resistance values can be approximated, subject to exact calibration of the current, by proportioning the maximum range in ohms for the fraction of maximum rated current to be programmed.

4. Adjust the external control in accordance with the Procedure for Internal Maximum Current Adjust.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL VOLTAGE

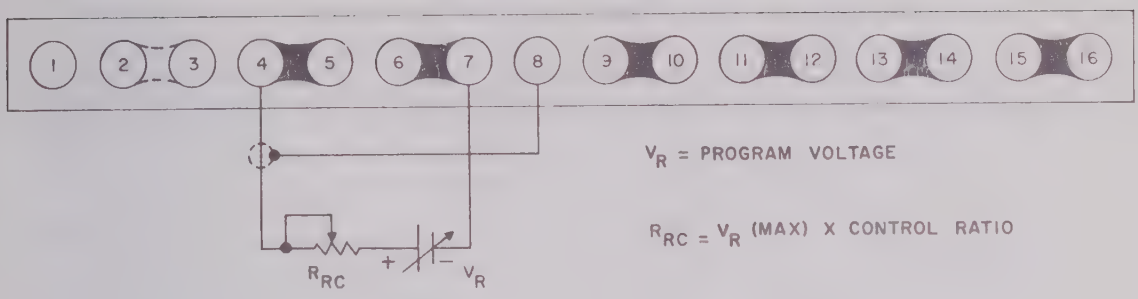

In this mode the output current is controlled by an external programming voltage. The voltage may have any value and is coupled to the unit through an externally connected resistor (R_{rc}). This resistor is determined by multiplying the maximum programming voltage by the control ratio for the Model. The actual resistor used should be adjustable, and should have a slightly higher (10%) value than calculated. It must be adjusted, at the maximum programming voltage, to calibrate for maximum current thereby preventing the maximum rated current from being exceeded.

PROCEDURE:

1. In order to calibrate the external coupling resistor (R_{rc}), the power supply must be pre-set with a load for maximum rated output current. With the front panel voltage and current controls both set to maximum, connect an adjustable load to the unit and set it to draw exactly the maximum rated current for the model. Leave the front panel controls and the load at that setting and turn the unit Off.

2. Remove jumper between (2)-(3). Connect the negative side of the programming voltage to terminal (7) on the back of the unit. Connect one end of the external coupling resistor, (Rrc), to the positive side of the programming voltage, and the other end to terminal (4).

3. With the programming voltage set to its maximum value, calibrate the maximum current as follows:

   a. Set the external resistor R_{rc} to its highest value.
   b. Turn the programming source and the power supply on. With R_{rc} at the higher resistance setting, output current should be some value below rated maximum. Adjust R_{rc} in the direction of decreasing resistance, increasing output current until rated maximum is obtained.

4. Varying the programming voltage down from its maximum value should vary the output current proportionately.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL SENSING

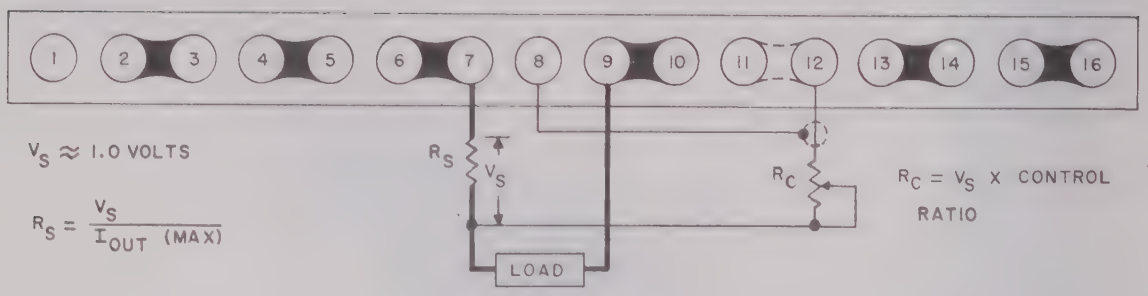

The output of the unit can be converted to provide constant current through a varying load with external current sensing. Current regulation of a high order can be achieved by optimizing the current sensing resistor for the lower values of output current.

In this mode the voltage control bridge of the power supply is being used to regulate current. The current bridge is disabled and consequently automatic crossover action does not occur and the voltage VIX indicator lamp will be lit.

A current sensing resistor, R_S, is connected to the output in series with the negative side of the load. A voltage, V_S, directly proportional to output current will be developed across R_S.

A current control resistor, R_C, is connected between the load end of R_S and the programming input terminal, (3). A constant current derived from the Power Supply's internal fixed reference voltage flows through control resistor R_C. This current is constant and determined entirely by the internal reference circuit, independent of the value of R_C and of output current. The voltage (V_C) across R_C will be equal to the resistance of R_C times 1/control ratio and will be constant at that value.

The regulating system in the supply will act to control current to the load so as to maintain the voltage V_S, across the sensing resistor equal to the constant voltage V_C, across the control resistor. By maintaining the voltage across R_S at a constant value, output current is maintained constant. For V_S a nominal 1.0 volt is recommended as a practical value, requiring that the resistance of R_C be equal to 1000 ohms for CK models and 100 ohms for KS models. By using a variable resistor for R_C, the voltage across it can be adjusted, providing a convenient means of varying the output current. This provides a variable range of current for any one value of sensing resistor, and allows the use of more readily available standard values of resistors for current sensing.

NOTE: R_c determines the sensing voltage that will be maintained across R_s. Varying this voltage varies the output current. However as this voltage is decreased, current regulation is degraded gradually and operation at sensing voltages below 0.1 volt is not recommended. A nominal 1.0 volt is chosen to be a practical value. Higher voltages do not appreciably improve regulation, while they do increase the dissipation requirements of the sensing resistor, and take more compliance voltage from the load.

PROCEDURE:

1. Determine the value of R_s on the basis of 1.0 volt divided by the maximum value of constant current that will be required. The resistor selected should have a power rating at least ten times its actual dissipation requirement, and should have a low temperature coefficient.

   If the exact resistance calculated for R_s is an impractical value, use the nearest lower value available and adjust the current to the exact value required with the current control resistor, R_c.

2. Connect R_s in series, between the negative DC output and the load. Connect the current control resistor, (R_c), between the load end of R_s and the terminal (7) at the rear. Remove the jumpers connected between terminals (11) and (12).

3. To prevent the internal current function from interfering with this external sensing mode, the Current Adjust control on the front panel should be turned to its maximum, fully clockwise position. This circuit may be more positively deactivated by disconnecting the jumper link on terminals (4)-(5) at the rear.

4. With the supply turned on and loaded, adjust the current control resistor to obtain the required value of output current. R_c may require resetting until the resistor temperature comes to equilibrium.

C A U T I O N

When using the external sensing mode of constant current operation it is important that the load not be allowed to achieve a value that will, at the current being drawn, attempt to develop a voltage across the output exceeding the rated maximum output voltage of the Power Supply. The voltage across the output will be equal to the product of the total resistance across the output (load resistance plus sensing resistor) times output current. In the external sensing mode of current regulation the output of the supply does not crossover into constant voltage at maximum output. Consequently if the output voltage is permitted to exceed rated maximum, the regulating function of the supply becomes depreciated.

PARALLEL OPERATION (MASTER-SLAVE)

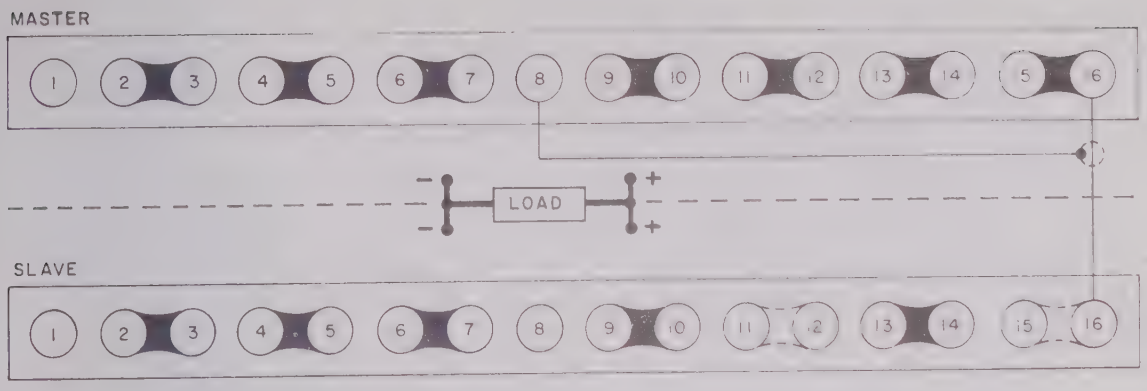

Two identical models may be paralleled in a master-slave connection to obtain higher current. In this arrangement, the pass transistors of both units are effectively in parallel with a common control derived from the master supply amplifier. (See note on following page)

1. Remove jumpers (11)-(12) and (15)-(16) on the slave unit. Join terminals (16) of both units with a shielded wire and connect the shield to terminal (8) on the master unit.

2. Connections to the load should be made with equal lengths of conductor from each power supply to insure optimum current sharing. Join front terminals only, or rear terminals only, to the load to further assist equal sharing of load current.

3. Remote error sensing, when used, is connected to the Master unit in a manner as prescribed under REMOTE ERROR SENSING.

PARALLEL OPERATION (AUTO-CROSSOVER)

The AUTO-CROSSOVER mode of parallel operation is unique with this class of equipment, and involves no special interconnection except to connect each Power Supply to the common load through approximately equal lengths of load connecting wire.

The voltage across a light load, will be controlled by whichever Power Supply has the higher voltage setting. Up to its current limit setting, this Power Supply will deliver all of the load current. The Power Supply with the lower voltage setting will idle at zero current until the current limit point of the first supply is reached by the load. At this point the first supply will switch to current regulation at its limit value and the load voltage will start to fall. The voltage will fall only to the voltage setting of the second supply whereupon this Power Supply will begin to deliver current to the load and will control its voltage. The current through the load will be the sum of the current from each supply.

The two voltage controls on the paralleled Power Supplies should be set as close together as possible, minimizing the small voltage drop when Supply No. 1 switches to current regulation. When the two voltage controls are set to the same voltage, the Power Supplies will share the load and the relative current from each Power Supply can be controlled by adjusting the relative settings of the voltage controls.

When two paralleled power supplies are set to widely different voltages, and the supply with the higher setting is in control, a current flow is set up through the voltage control of the idle supply equal to the output voltage divided by the resistance of the voltage control setting of the idling supply.

To prevent this current from becoming excessive, a minimum setting of the lower voltage control must be observed. A minimum of 1/10th the setting of the higher (controlling) voltage control is recommended.

Do not allow the lower setting to approach zero since the current can become large enough to damage the control.

Note: For either of the foregoing methods of parellel operation, simultaneous application and removal of line power is required.

2.3 INTERNAL ADJUSTMENT PROCEDURES

Three internal circuit adjustments are contained in the Supply. These are preset at the factory and should require readjustments only following the replacement of a circuit related component, or when required in conjunction with one of the special programming applications.

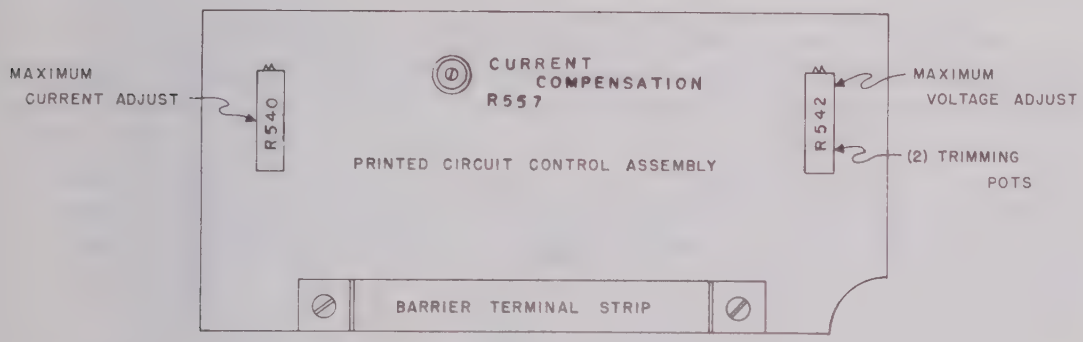

Figure 2.3 LOCATION OF ADJUSTING CONTROLS

The controls are located on the printed circuit control assembly as shown in Figure 2.3. Access to the controls is made by removing the case from the Power Supply. Four case retaining screws are mounted through the top and bottom flange of the front panel and two retaining screws are at the bottom rear.

1. Maximum Voltage Adjust. - This adjusts the constant current ratio between the resistance of the Voltage Control, either internal or external, and the output voltage. This control ratio is intended to be a nominal value of 1000 ohms per volt, but is made adjustable around that value to allow exact setting of the output voltage to the Voltage Control resistance.

   a. To adjust for the front panel Voltage Control, R111 turn both front panel controls, Voltage and Current to their maximum (clockwise) position. With no load connected, turn the Maximum Voltage Adjust R542, to obtain an output voltage equal to the value of R111 in thousands of ohms; for example, this voltage is 40 volts for Model CK 36-1.5M where R111 is 40 K.

   b. To adjust for an external control, first set the external control to its maximum position, and turn the Maximum Voltage Adjust to obtain an output voltage equal to the maximum resistance of the external control divided by 1000. This value can be 2% higher than the rated maximum output voltage of the unit.

2. Maximum Current Adjust. - This sets the upper end of the range for the Current Adjust control at the front panel (or an external control, if one is used). It is adjusted so that the Current Adjust control when set to its maximum, will not produce more than approximately 2% higher than the rated maximum current.

a. Connect a variable load to the output, through an accurate external ammeter.

b. Set the output voltage to maximum rated output voltage; turn the Current Adjust control to its maximum (clockwise) position; turn the Maximum Current Adjust to maximum clockwise position.

c. Starting from no-load, increase load current to obtain an output current approximately 2% higher than rated maximum. Adjust the Maximum Current Adjust to obtain an output current approximately 2% higher than rated maximum.

3. Current Compensation (Constant Current Mode)

Adjustment Control R557 coupled with R554, R555, and R556 compensates for the internal loading of the voltmeter and voltage bridge circuit in constant current operation. Without this compensation constant current regulation is degraded.

The initial adjustment of R557 is made at the factory and would require re-adjustment only after a component change or where a significant change is made in internal loading.

The adjustment is made at a load current of 10-20% of maximum current to achieve best resolution of setting. A differential voltmeter with better than one millivolt resolution is required to measure a voltage drop of approximately one volt across a current measuring resistor of suitable value (see page 4.1-2). A test load resistance, across which is connected a shorting switch, is used to introduce maximum compliance excursion for the measurement.

With the shorting switch engaged and current flowing through the measuring resistor set the differential voltmeter to zero. Dis-engage the shorting switch and note deflection on meter. Rotate R557 to minimize this deflection on repeated tests.

SECTION 3.0 CIRCUIT DESCRIPTION

See Diagram on Page 3.1-2

The automatic voltage/current crossover characteristic of the CK series entails two separate control channels each with its comparison bridge circuit and associated error amplifier. In voltage mode operation the VOLTAGE BRIDGE senses the voltage at the power supply terminals (or load terminals in remote sensing) and compares this voltage to a zener reference voltage. Through voltage proportioning resistors R_r and R_{VC} a control signal is produced at V,V' and amplified by Q502 and Q503.

For current mode operation the CURRENT BRIDGE senses the voltage drop across the current sensing resistor, R_S, and compares this voltage to a zener reference voltage. Through voltage proportioning resistors R_r and R_{IC} a control signal is produced at I,I' and amplified by Q509 and Q510.

Output of each amplifier is directed to an 'OR' type gate which determines the mode of operation for control of the pass transistors. This gate consists of Q504 and Q505 with their emitters connected to a common resistor at E. The voltage at point E reflects the higher voltage level between the current and voltage amplifier outputs. From this point the control signal is amplified by Q507 and coupled to the pass driver by emitter follower, Q506.

The operating mode of the system is mutually dependant upon the voltage control setting, the current control setting, and the load resistance. The characteristic crossover point is uniquely defined by that ratio of the voltage and current setting which equals the load resistance (crossover resistance).

For a visual indication of the mode of operation, VIX panel indicators V and I are included. These are driven by transistors Q511 and Q512. Access to these drivers are provided for remote indication and for control applications by standard pin jack connections located at the rear. A ± 8 volt excursion occurs during the crossover transition.

DIVIDER BUFFER, Q508 is an impedance transformer to provide an intermediate voltage at low impedance for the operation of Q507 and Q510.

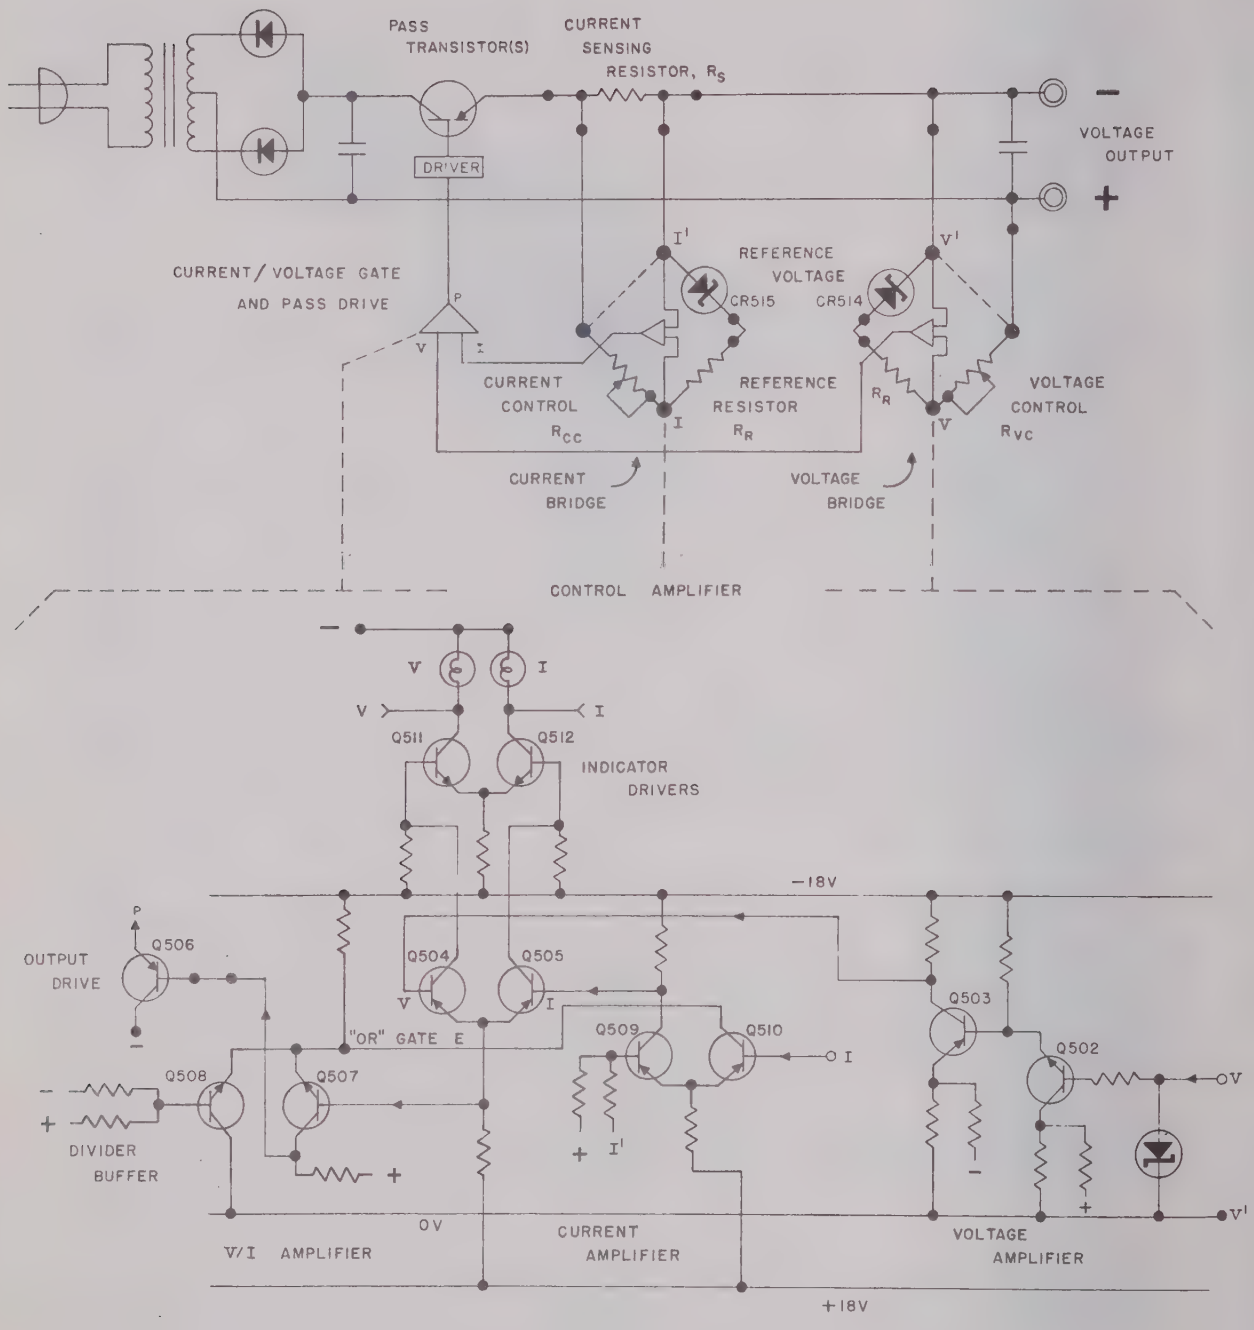
PASS TRANSISTOR(S)
CURRENT SENSING RESISTOR, R_S
DRIVER
VOLTAGE OUTPUT
CURRENT / VOLTAGE GATE AND PASS DRIVE
REFERENCE VOLTAGE
CR515
CR514
CURRENT CONTROL R_{CC}
REFERENCE RESISTOR R_R
VOLTAGE CONTROL R_{VC}
CURRENT BRIDGE
VOLTAGE BRIDGE
CONTROL AMPLIFIER
Q511
Q512
INDICATOR DRIVERS
-18V
Q506
OUTPUT DRIVE
Q504
Q505
"OR" GATE
Q509
Q510
Q503
Q502
Q508
Q507
DIVIDER BUFFER
0V
V/I AMPLIFIER
CURRENT AMPLIFIER
VOLTAGE AMPLIFIER
+18V

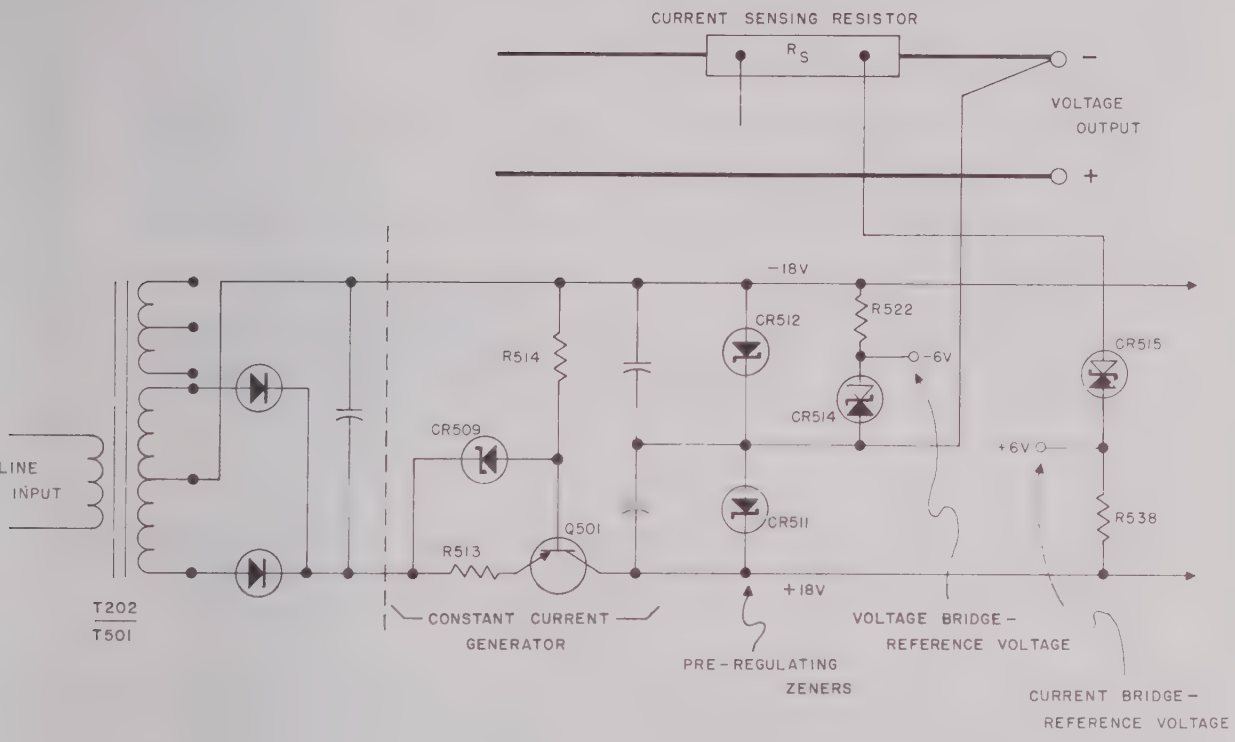

Rectified and filtered DC is applied to a constant current generator consisting of regulating transistor Q501 and associated components. The regulated voltage across Zener CR509 controls Q501 to maintain this voltage across R513. Constant current must, therefore, flow through R513,Q501, and the connected circuits. With constant current flowing through CR511 and CR512 a -18 volts and +18 volts source is developed, independant of line variations.

Regulated current flows through temperature compensated Zeners CR514 and CR515 through respective resistors R522 and R538. These Zeners provide the reference voltage for the voltage bridge and current bridge respectively.

The ± 18 volts source serves also as the operating voltages for the control amplifiers.

SECTION 4.0 POWER SUPPLY MEASUREMENTS

Measurement of the significant parameters of a power supply is a requirement for incoming inspection, periodic maintenance, or repair check. Since these measurements require special techniques to insure correct results, suggestions for their performance are included herewith.

Required Instrumentation:

1) A constant AC supply voltage with provisions for adjusting or "stepping" the voltage over a specified region (105-125 volts). A variable auto-transformer is generally adequate, if it is rated to deliver the input current requirements of the power supply without significant change in output voltage.

2) A resistor load, or equal, to fully load the supply at constant voltage or fully absorb the compliance voltage at constant current. Provisions for on-off switching is desirable.

3) Voltage Monitor -

   a) A differential voltmeter with a resolution of 1 millivolt or better, or a power supply analyzer such as the Kepco Regulation Analyzer, Model 901C, which displays the regulation percentage directly.

or b) A DC coupled oscilloscope with better than 1 millivolt per centimelts deflection sensitivity and a suitable "buck-out" voltage source of equal magnitude and comparable or better stability than the voltage under test.

The FOUR-TERMINAL NETWORK is an essential device for precise measurement of regulation. In Figure 1 is shown the location of sensing leads for

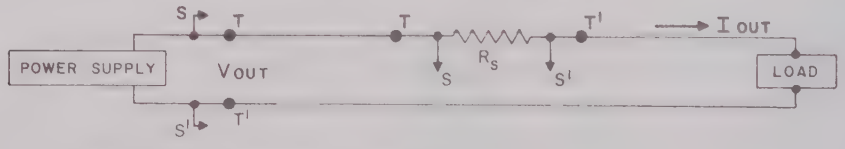

Figure 1 VOLTAGE AND CURRENT SENSING

Proper monitoring of output voltage or load current (voltage drop across sensing resistor, R_S). It is to be noted that the sensing leads (S)(S') for V out are connected to the power supply side of output terminals (T)(T'), and for I out, across the current sensing resistor, R_S, within R_S terminal connections (T)(T'). The function of the four-terminal network (T)(T') - (S)(S') is the elimination of contact resistance at (T)(T') from the sensing circuit. This resistance is of significant magnitude at moderate to high currents where a high order of regulation measurement is to be made.

VOLTAGE REGULATION is defined as the amount of output voltage change resulting from a specified change of line voltage or output load. The measurement is made at the rear terminals of the power supply in the manner shown in Figure 2, which is a practical compromise to the requirement of a 4-terminal network.

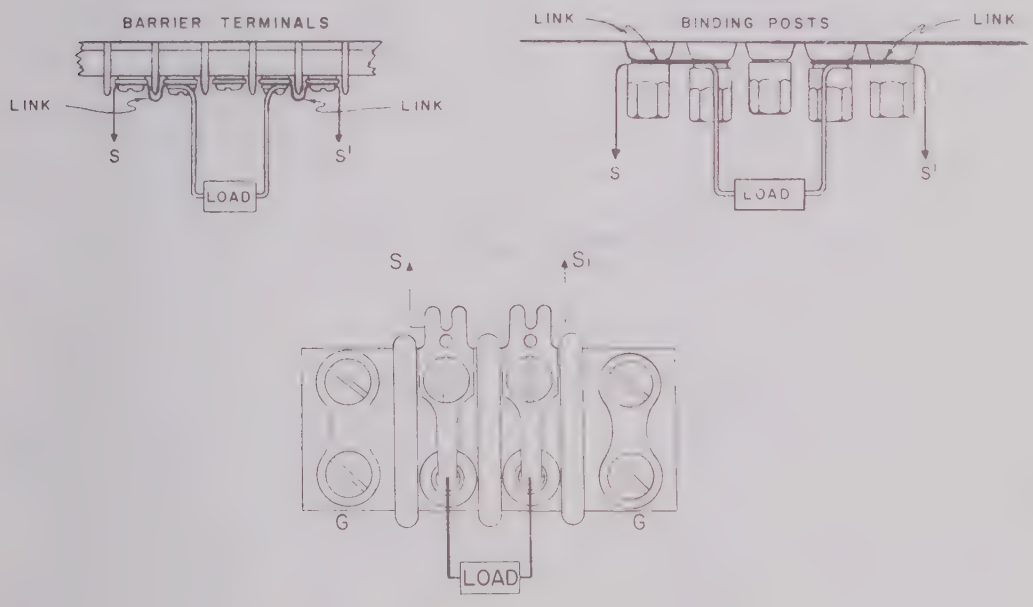

Figure 2

CURRENT REGULATION is defined as the amount of current change resulting from a specified change in line voltage or output load. The measurement is made by monitoring the drop across a sensing resistor that develops approximately one volt. This resistor must be selected for low temperature coefficient and high wattage - over ten times the actual wattage - to reduce changes in the sensing resistance resulting from heating. Consideration must be given to current drawn by devices connected to the power supply terminals other than the useful load through which constant current is desired. Such devices will degrade current regulation. External voltmeters should be of the high impedance type with higher than 100 megohms input.

RIPPLE - An oscilloscope or true RMS indicating meter may be used with consideration given to DC blocking (a 0.1 mfd capacitor of suitable voltage is generally adequate). The peak-to-peak oscilloscope measurement divided by 3 is reduced to an RMS value to a first order approximation if the observed signal approaches a sine waveform.

kepco inc. ® REPLACEMENT PARTS LIST

POWER SUPPLY MODEL CK 36-1.5M Code 3-1664

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
B201	1	Motor	Barber Colman DYAF761-1	148-0007
C202, 204	2	Capacitor, Electrolytic, Pigtail 100 µf, 150 v	Industrial Cond. 10B916RM	117-0140
C203, 206	2	Capacitor, Electrolytic, Can 3 K µf, 75 v	General Electric 43F3332CA3	117-0415
C207, 208	2	Capacitor, Mylar 0.01 µf, 200 v	Sprague Electric 192P10302	117-0353
C305	1	Capacitor, Mylar 0.2 µf, 600 v	Good All 620S20406W	117-0200
C313, 314	2	Capacitor, Electrolytic, Pigtail 100 µf, 25 v	Sprague Electric TE-1211	117-0289
C315	1	Capacitor, Electrolytic, Pigtail 150 µf, 75 v	General Electric 43F7147AA1	117-0388
C402	1	Capacitor, Electrolytic, Pigtail 150 µf, 75 v	General Electric 43F7147AA1	117-0388
C410	1	Capacitor, Electrolytic, Pigtail 1 K µf, 6 v	Industrial Cond. 1B1382RM	117-0346
CR202, 203	2	Rectifier, Silicon, Pigtail	Electronic Devices	124-0133
CR204, 205	2	Rectifier, Silicon	Motorola 1N3210R	124-0166
CR306	1	Rectifier, Germanium, Pigtail	General Electric 1N92	122-0013
CR407, 408	2	Rectifier, Silicon, Pigtail	Automatic PT-5	124-0028
CR416, 417	2	Rectifier, Silicon, Pigtail	Electronic Devices	124-0133
CR418	1	Zener Diode	Hoffman HZ(1)R12	121-0012
DS101, 102	2	Pilot Light Assembly	Drake Mfg. 7-503	152-0071
F101	1	Fuse, Slow Blow 3 a, 125 v	Bussman MDX-3	141-0028
*M101	1	Meter, Amp. 0-1.5 a, DC	General Electric 8DW91A224BN2	135-0156
*M102	1	Meter, Volt 0-50 v, DC	General Electric 8DW91V201AR2	135-0138
Q201-205	5	Transistor, PNP	Delco	**119-0016
***R103	1	Resistor, Fixed, Precision 50 K ohm, 1/2 w, 1%	Wilrite Products CMED	115-1368

*Metered Models Only
**See Field Replacement Page
***Unmetered Models Only

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R110	1	Resistor, Variable, 10-Turn 1 K ohm, 3 w, 3%	Spectrol 510 series	115-1304
R111	1	Resistor, Variable, 10-Turn 40 K ohm, 3 w, 0.25%	Spectrol 510 series	115-1238
R204, 209	1	Resistor, Fixed, Power, Strip 1 K ohm/1 K ohm, 20 w, 5%	Hardwick Hindle BRS-2000-20-1000/1000-5	115-1328
R205	1	Resistor, Power, Axial 4 K ohm, 5 w, 5%	Ward Leonard 5X4000	115-0753
R206	1	Resistor, Fixed, Power, Strip 1 K ohm, 20 w, 5%	Ward Leonard 20S1000	115-0611
R207, 211 213, 214	4	Resistor, Fixed, Power, Axial 1 ohm, 3 w, 5%	Ward Leonard 3X1	115-0499
R208	1	Resistor, Fixed, Molded 100 ohm, 1 w, 10%	Allen Bradley GB1011	115-0002
R212	1	Resistor, Sensing 0.667 ohm, 50 w, 1%	Tepro Electric TM-50W	115-1385
R348	1	Resistor, Fixed, Molded 10 ohm, 1/2 w, 10%	Allen Bradley EB1001	115-0502
R456	1	Resistor, Fixed, Molded 47 ohm, 1/2 w, 10%	Allen Bradley EB4701	115-0718
R457	1	Resistor, Fixed, Power, Axial 2 K ohm, 5 w, 5%	Ward Leonard 5X2000	115-0568
S101	1	Switch, Toggle, SPST 15 a, 125 v	Carling AA252-63XKEP2	127-0107
T201	1	Transformer, Power	Kepco Magnetics	100-1382
T401	1	Transformer, Reference	Kepco Magnetics	100-1343

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

kepco inc. REPLACEMENT PARTS LIST

AMPLIFIER BOARD ASSEMBLY MODEL CK 36-1.5M Code 3-1664

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
C507	1	Capacitor, Mylar 0.4 µf, 200 v	Hopkins Eng. P42MK	117-0128
C509	1	Capacitor, Mylar 0.02 µf, 200 v, 10%	Hopkins Eng. P0222MK	117-0377
C510	1	Capacitor, Mylar 0.2 µf, 200 v, 10%	Hopkins Eng. P22MK	117-0236
C511	1	Capacitor, Mylar 0.5 µf, 200 v, 10%	Hopkins Eng. P52MK	117-0123
CR509, 512	2	Zener Diode	Transitron SV125	121-0028
CR510, 511	2	Zener Diode	Motorola, Inc. 1N3026B	121-0036
CR514, 515	2	Zener Diode	International Rect. 1N821	121-0041
CR516, 517	2	Rectifier, Silicon, Pigtail	Electronic Devices	124-0178
Q501	1	Transistor, PNP	Delco	**119-0016
Q502	1	Transistor, Silicon, NPN	General Electric	**119-0054
Q503, 506, 509, 510	4	Transistor, Silicon, PNP	Hughes	**119-0055
Q504, 505,	2	Transistor, PNP	Tung Sol	**119-0022
Q507, 508, 511, 512	4	Transistor, NPN	General Transistor	**119-0024
R513	1	Resistor, Fixed, Power, Axial 150 ohm, 3 w, 5%	Ward Leonard 3X150	115-0481
R514	1	Resistor, Fixed, Power, Axial, WW 6 K ohm, 3 w, 3%	Hardwick Hindle 9/16 GA6K LTC	115-1155
R515	1	Resistor, Fixed, Power, Axial 100 ohm, 3 w, 5%	Ward Leonard 3X100	115-0471
R516	1	Resistor, Fixed, Precision, WW 36 K ohm, 2 w, 5%	Tepro Electric TS2C	115-1313
R517	1	Resistor, Fixed, Molded 39 ohm, 1/2 w, 10%	Allen Bradley EB3901	115-0623
R518	1	Resistor, Fixed, Molded 390 ohm, 1/2 w, 10%	Allen Bradley EB3911	115-1145
R519	1	Resistor, Fixed, Power, Axial 10 ohm, 3 w, 5%	Ward Leonard 3X10	115-0421

**See Field Replacement Page

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO INC

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R520	1	Resistor, Fixed, Precision, WW 13 K ohm, 1 w, 5%	Tepro Electric TS-1W	115-1309
R521	1	Resistor, Fixed, Precision, WW 1.2 K ohm, 1 w, 5%	Tepro Electric TS-1W	115-1306
R522	1	Resistor, Fixed, Precision, WW 850 ohm, 1 w, 3%	Tepro Electric TS-1W	115-1311
R523	1	Resistor, Fixed, Molded 820 ohm, 1 w, 10%	Allen Bradley GB8211	115-1278
R524	1	Resistor, Fixed, Molded 12 K ohm, 1/2 w, 10%	Allen Bradley EB1231	115-1168
R525	1	Resistor, Fixed, Molded 1 K ohm, 1/2 w, 10%	Allen Bradley EB1021	115-0547
R527	1	Resistor, Fixed, Molded 5.6 K ohm, 1/2 w, 10%	Allen Bradley EB5621	115-1201
R528	1	Resistor, Precision, WW 5.7 K ohm, 1 w, 1%	Tepro Electric TS-1W	115-1301
R531, 546	2	Resistor, Fixed, Molded 510 ohm, 1/2 w, 5%	Allen Bradley EB5115	115-0824
R532	1	Resistor, Fixed, Molded 1.8 K ohm, 1/2 w, 10%	Allen Bradley EB182[illegible]	115-0473
R533	1	Resistor, Fixed, Precision, WW 6.2 K ohm, 1 w, 5%	Tepro Electric TS-1W	115-1335
R534	1	Resistor, Fixed, Precision, WW 2.5 K ohm, 1 w, 5% LTC	Tepro Electric TS-1W	115-1307
R535	1	Resistor, Fixed, Precision, M.F. 50 K ohm, 1/2 w, 1%	Wilrite Products CMED	115-[illegible]38
R536	1	Resistor, Fixed, Precision, WW 13 K ohm, 1 w, 5%	Tepro Electric TS-1W	115-1309
R537	1	Resistor, Fixed, Precision, WW 250 ohm, 1 w, 3%	Tepro Electric TS-1W	115-1303
R538	1	Resistor, Fixed, Precision, WW 1.3 K ohm, 1 w, 3%	Tepro Electric TS-1W	115-1310
R539	1	Resistor, Fixed, Precision, WW 9 K ohm, 1 w, 5%	Tepro Electric TS-1W	115-1308
R540	1	Resistor, Variable 1.5 K ohm, 1/2 w, 10%	Bourns 3067P-1-152	115-1535
R541	1	Resistor, Fixed, Precision 5.1 K ohm, 1 w, 1%	Tepro Electric TS-1W	115-1572
R542	1	Resistor, Variable, Multiturn 1 K ohm, 1/2 w, 10%	Bourns 3067S-1-102	115-0739
R544	1	Resistor, Fixed, Molded 2.7 ohm, 1/2 w, 10%	Allen Bradley EB27G1	115-1595
R550, 551	2	Resistor, Fixed, Molded 2.2 K ohm, 1/2 w, 10%	Allen Bradley EB2221	115-0466

AMPLIFIER BOARD ASSEMBLY MODEL CK 36-1.5M Code 3-1664

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R552	1	Resistor, Fixed, Molded 100 ohm, 1/2 w, 5%	Allen Bradley EB1015	115-0341
R554	1	Resistor, Fixed, Molded Glass 91 K ohm, 1/2 w, 5%	Corning Glass C20	115-1440
R555	1	Resistor, Fixed, Precision, WW 3.5 ohm, 1 w, 1%	Tepro Electric TS1W	115-1375
R556	1	Resistor, Fixed, Molded 68 K ohm, 1/2 w, 5%	Corning Glass C20	115-1445
R557	1	Resistor, Variable 100 K ohm, 0.25 w, 20%	Allen Bradley FR104M	115-1500

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

FIELD REPLACEMENT LIST

Kepco Part No.	Description	Recommended Replacement MFR.	Mfr. No.
119-0003 119-0016	Transistor PNP	Delco	2N174
119-0022	Transistor PNP	Tung-Sol	2N382 2N1707
119-0034	Transistor PNP	Delco	2N1172
119-0035, 0036,0037	Transistor PNP	Motorola Clevite	2N1167 CTP 3553
119-0048	Transistor Unijunction	General Electric	2N1671A
119-0020	Transistor PNP	RCA	2N398A
119-0038	Transistor NPN	Transitron	ST29
119-0004	Transistor PNP	Delco	2N277
119-0024	Transistor NPN	General Inst. RCA Sylvania	2N1605 2N388 2N1308
119-0049	Transistor PNP	Delco	2N669
119-0054	Transistor NPN	General Electric	2N338
119-0055	Transistor PNP	Sperry	2N329A

PCB-1 V/I CONTROL BOARD

PCB-2 SCR CONTROL BOARD

PLUG IN DRIVER AND PASS ASSEMBLIES - CHASSIS SOCKET VIEW

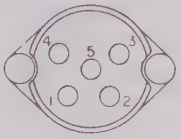

TRANSISTORS

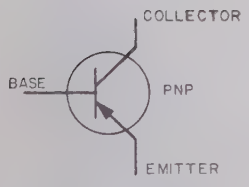

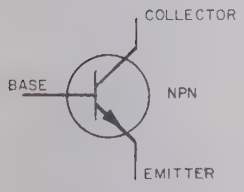

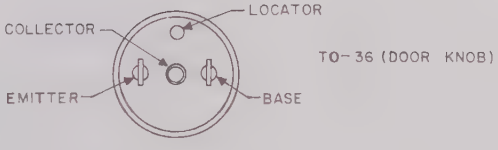

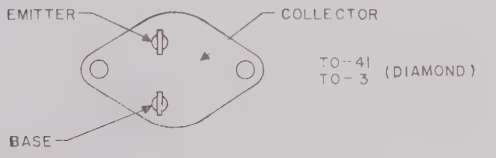

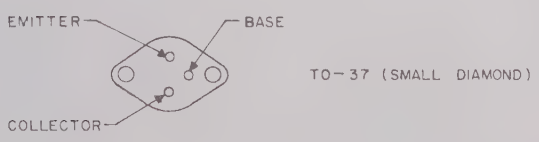



TERMINAL DESIGNATIONS OF CONNECTORS AND COMPONENTS

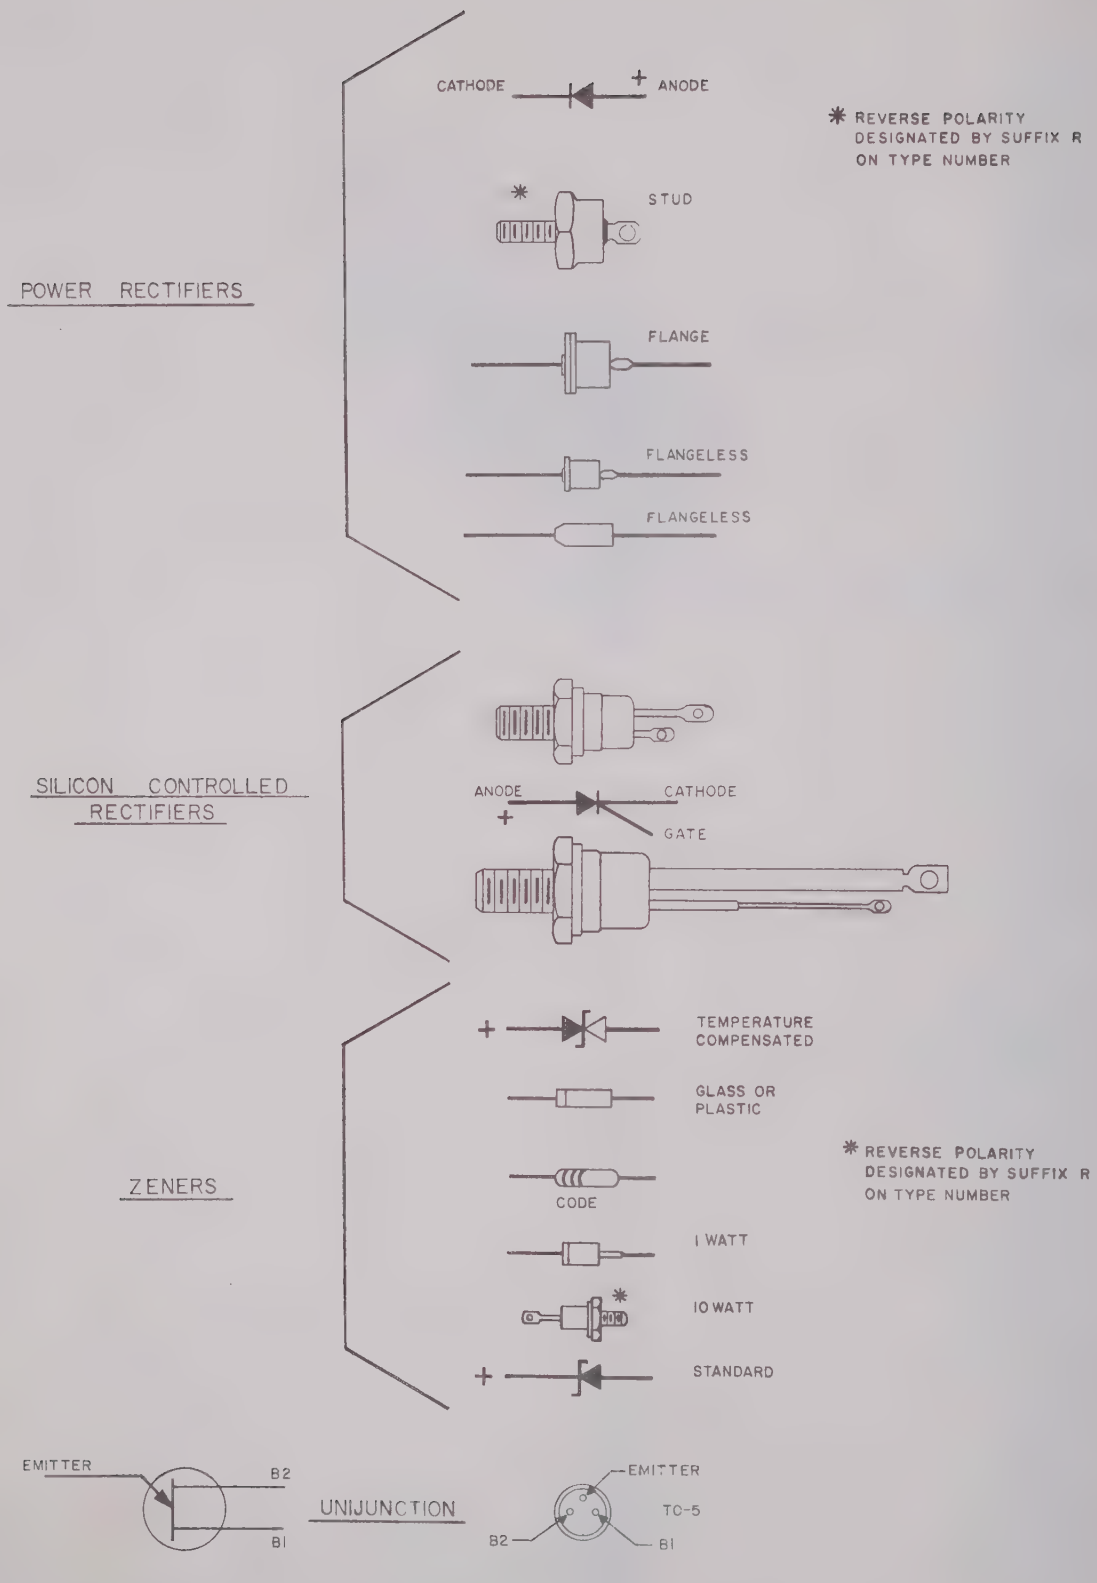

TERMINAL DESIGNATIONS OF CONNECTORS AND COMPONENTS

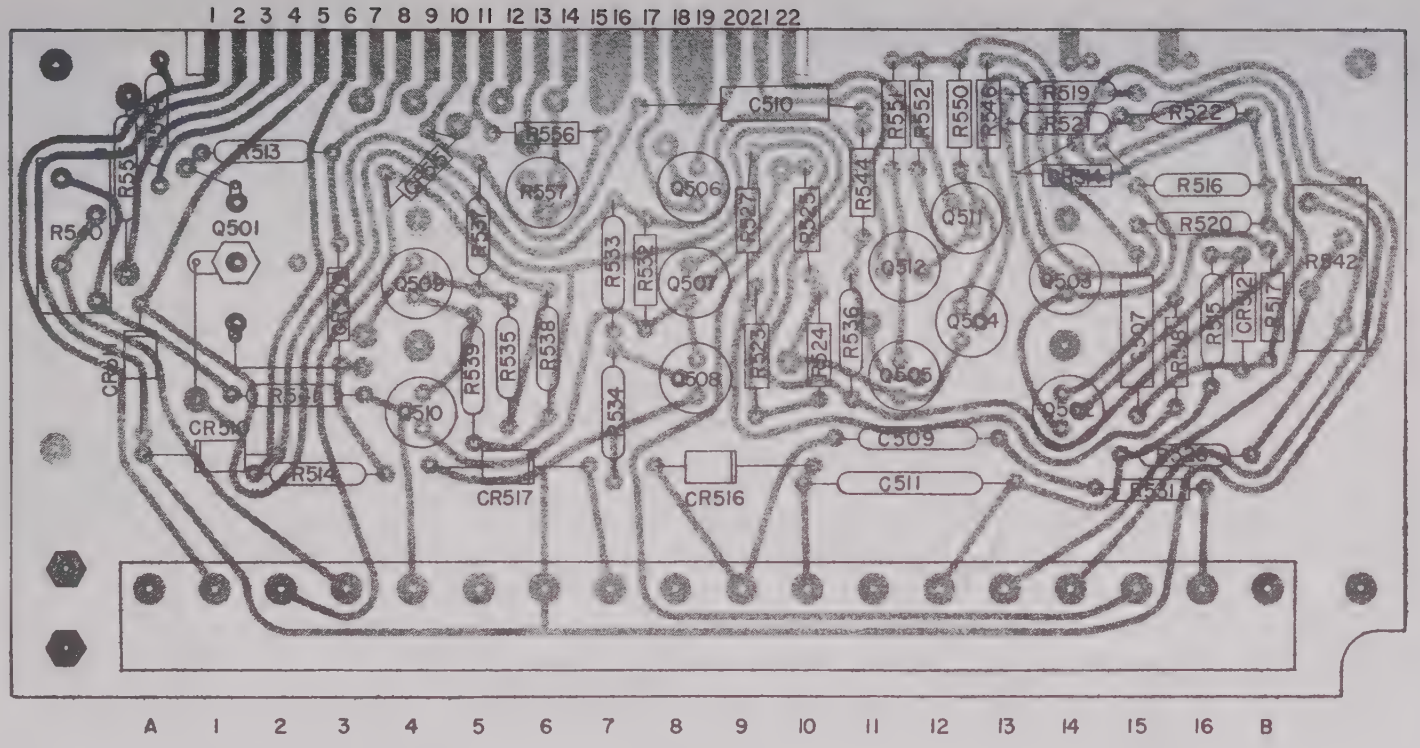

NOTE:

THIS DRAWING IS TO BE USED FOR THE FOLLOWING MODELS

CK2-8M
CK60-0.5M
CK8-5M
CK40-08M
CK36-1.5M
CK18-3M

KEPCO INC. FLUSHING N.Y.			
TITLE: COMPONENT LOCATION PCB-1			
DRAWN: C. Fite	CHECKED: GB	APPROVED:	DATE: 1-28-64
MODEL NO.: SEE NOTE		PART NO.:	SCALE: NONE
SPEC. NO.: CMO 3661			

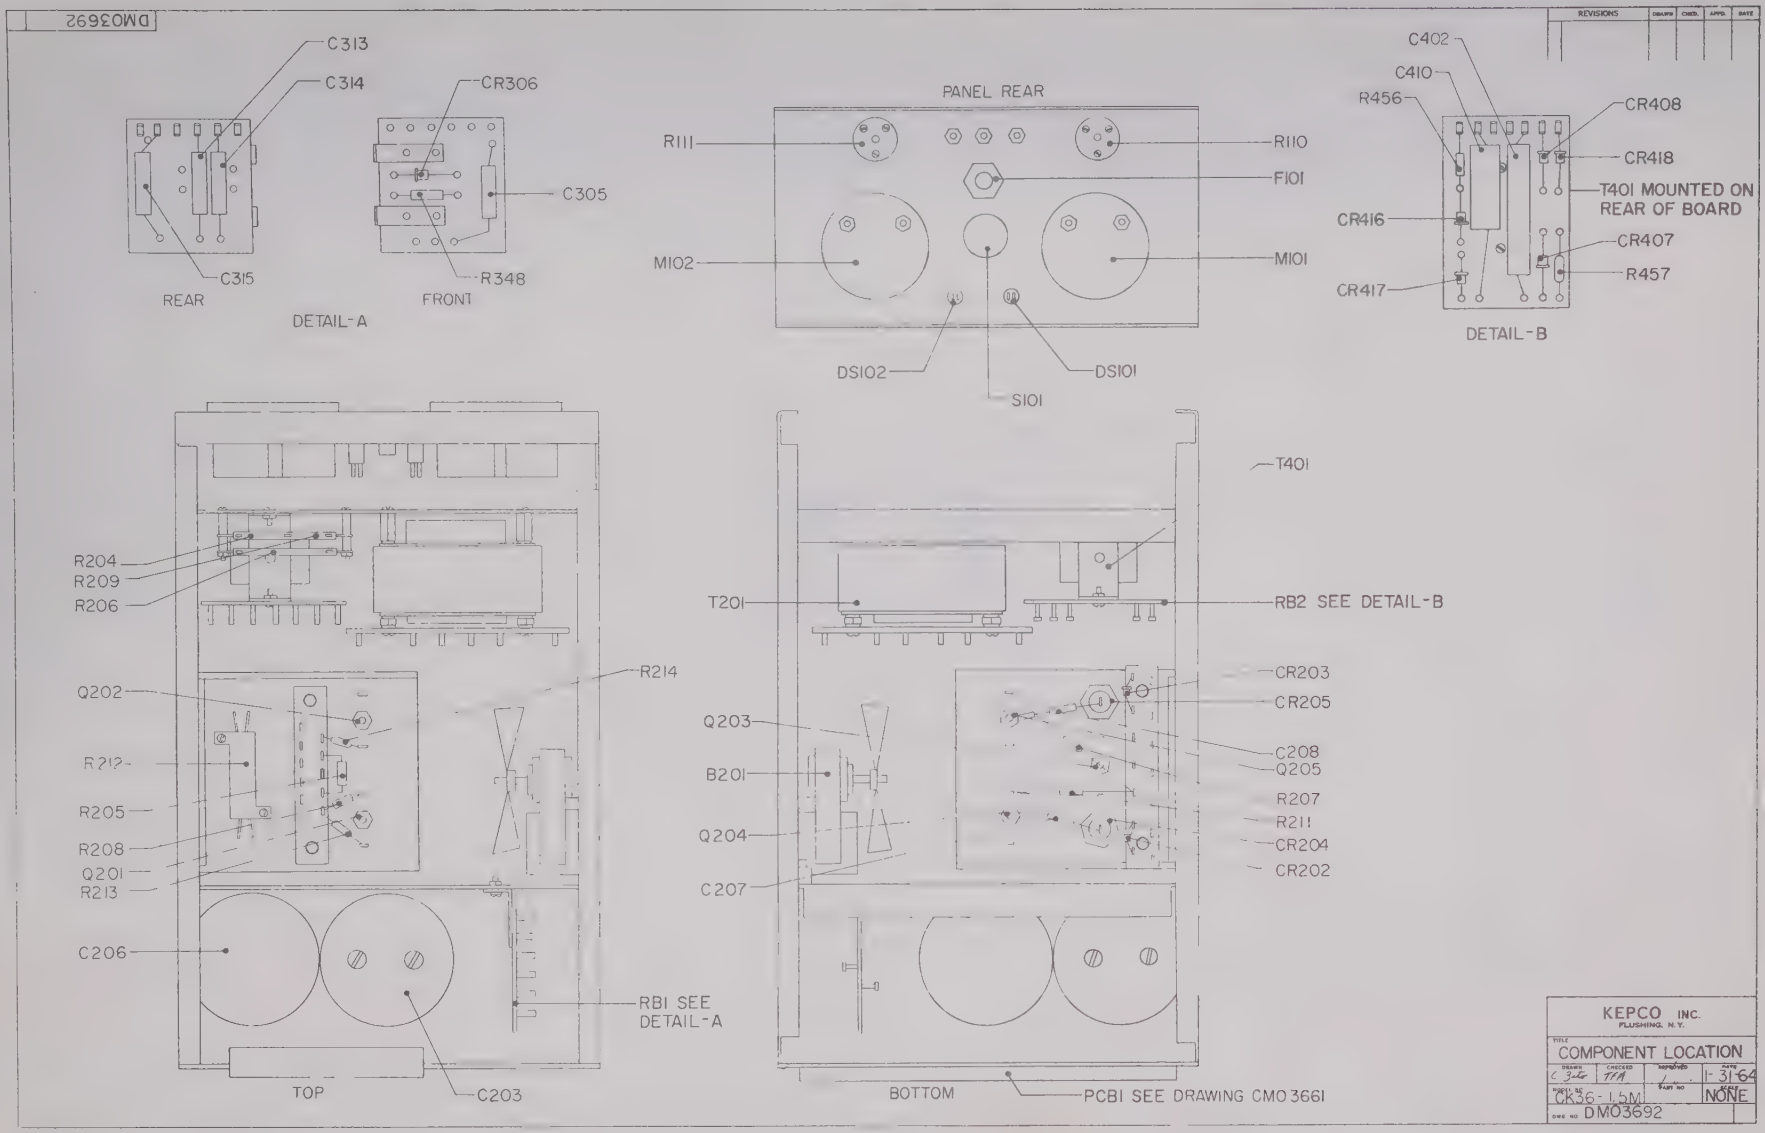
DM03692
REVISIONS
C313
C314
C315
REAR
CR306
C305
R348
FRONT
DETAIL-A
PANEL REAR
R111
R110
F101
M102
M101
DS102
DS101
S101
C402
C410
R456
CR408
CR418
T401 MOUNTED ON REAR OF BOARD
CR416
CR407
CR417
R457
DETAIL-B
T401
R204
R209
R206
R214
Q202
R212
R205
R208
Q201
R213
C206
RB1 SEE DETAIL-A
TOP
C203
T201
RB2 SEE DETAIL-B
CR203
CR205
Q203
C208
B201
Q205
R207
Q204
R211
CR204
C207
CR202
BOTTOM
PCB1 SEE DRAWING CMO3661
KEPCO INC.
FLUSHING, N.Y.
TITLE
COMPONENT LOCATION
DRAWN
CHECKED
APPROVED
DATE
1-31-64
SIZE
NONE
DWG NO DM03692

DM03095

REVISIONS	DRAWN	CHKD	APPD.	DATE

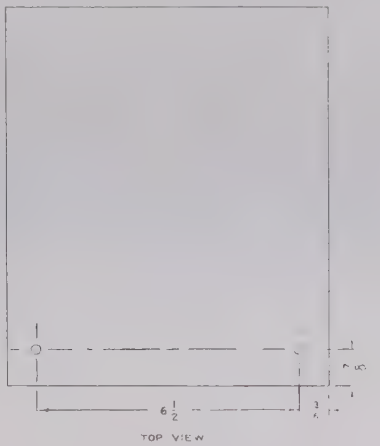

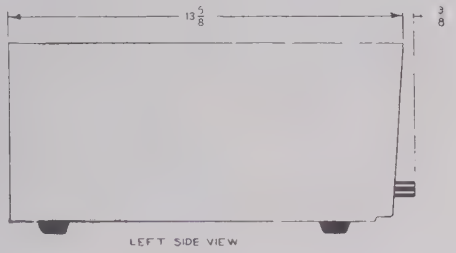

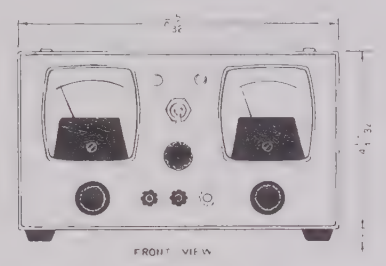

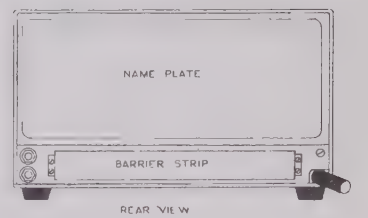

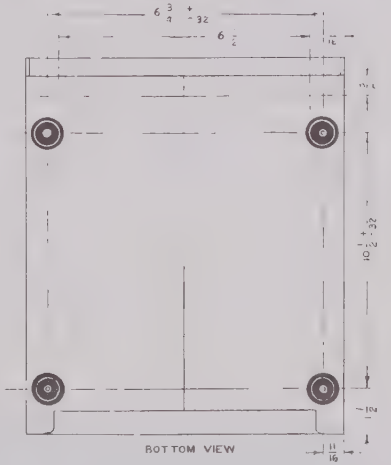

MODEL	DC OUTPUT RANGE VOLTS	DC OUTPUT RANGE AMPS	OUTPUT IMPEDANCE OHMS MAX. DC TO 100 CPS	OUTPUT IMPEDANCE OHMS MAX. 100 CPS TO 1 KC	OUTPUT IMPEDANCE OHMS MAX. 1 KC TO 10 KC + NM	* MAX INPUT AMPS
CK R-5M	0-5	0-1	0.765 X 10⁻³	0.01	0.05+0.5	1
CK R-5M	0-5	0-5	0.16 X 10⁻³	0.01	0.05+0.5	1.2
CK 1R-5M	0-16	0-1	0.6 X 10⁻³	0.01	0.05+0.5	1.5
CK [illegible] -5M	0-16	0-1	2.4 X 10⁻³	0.02	0.08+0.8	1.5
CK 40 - 5M	0-40	0-0.5	6 X 10⁻³	0.02	0.08+0.8	1
CK 60 - 5M	0-60	0-0.5	12 X 10⁻³	0.02	0.08+0.8	1

* AT 125 V AC

TOLERANCE UNLESS OTHERWISE SPECIFIED — FRACTIONS ± 1/64 — DECIMALS ± .005 — ANGLES ± 1/2

KEPCO INC.
FLUSHING, N.Y.

TITLE: OUTLINE DRAWING

DRAWN	CHECKED	APPROVED	DATE
GDS			9-10-63

MODEL NO: CK SERIES
PART NO:
SCALE:
DWG NO: DM03095

DMO 3036

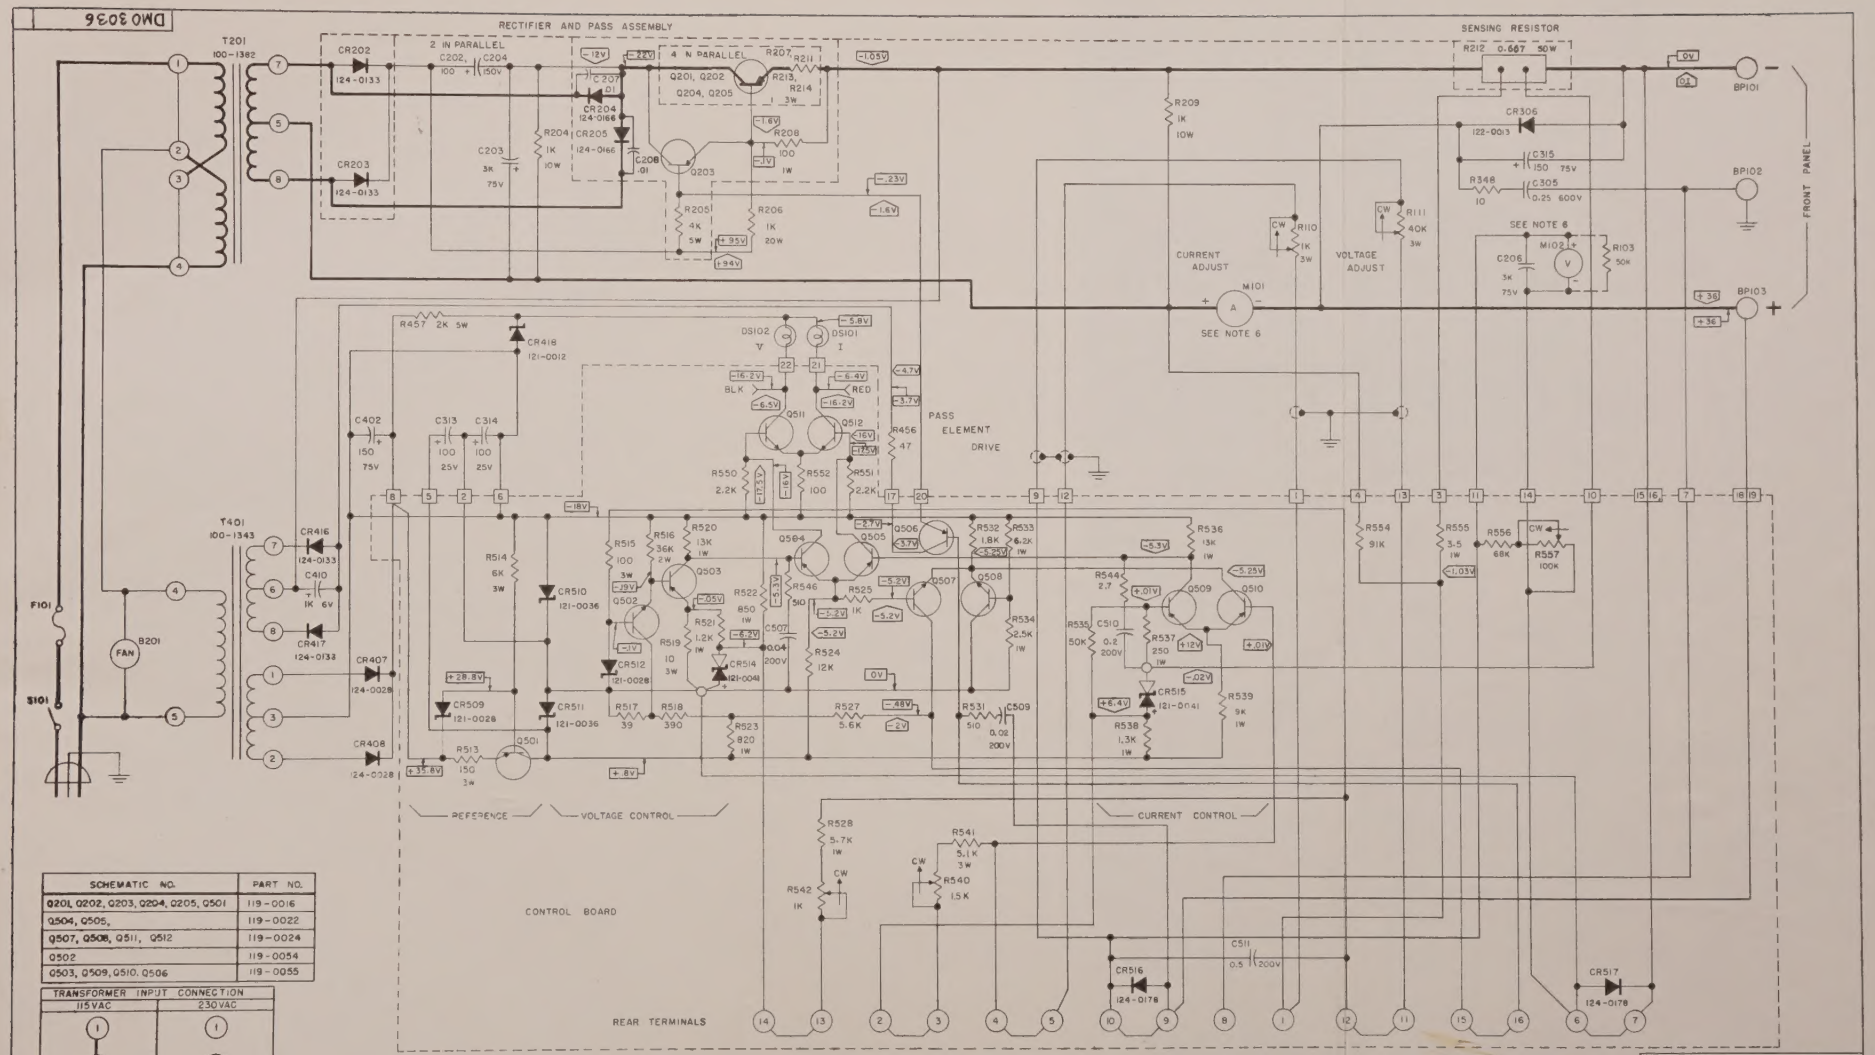

SCHEMATIC NO.	PART NO.
Q201, Q202, Q203, Q204, Q205, Q501	119-0016
Q504, Q505,	119-0022
Q507, Q508, Q511, Q512	119-0024
Q502	119-0054
Q503, Q509, Q510, Q506	119-0055

TRANSFORMER INPUT CONNECTION	
115VAC	230VAC
1	1
2	2
3	3
4	4
FUSE 3A	FUSE 1.5A

NOTES:

1. ALL RESISTORS ARE 10% 1/2W EXCEPT AS NOTED. VALUE GIVEN IN OHMS; K=1000 OHMS. ALL CAPACITOR VALUES ARE GIVEN IN MICROFARADS.
2. ITEMS WITH REFERENCE DESIGNATION 500-599 ARE MOUNTED ON PRINTED CIRCUIT BOARD.
3. VOLTAGE READINGS IN RECTANGLES (▭) ARE TYPICAL VALUES FOR VOLTAGE MODE OPERATION WITH AC LINE AT 115V, OUTPUT SET TO MAXIMUM VDC, AND NO LOAD. MEASUREMENTS ARE REFERRED TO (-) DC OUTPUT TERMINAL.
4. TRANSFORMER CONNECTION IS SHOWN FOR 115VAC OPERATION.
5. ORDER REPLACEMENT PARTS BY KEPCO PART NUMBER. SEE PARTS LIST.
6. METERS MI01 & MI02 APPLY ONLY TO METERED MODELS; RI03 APPLIES TO UNMETERED MODELS.
7. VOLTAGE READINGS ENCASED IN THE 5 SIDED SYMBOLS (⬠) WERE TAKEN WITH UNIT IN CURRENT MODE AT MAXIMUM OUTPUT VOLTAGE AND MAXIMUM CURRENT. MEASUREMENTS ARE REFERRED TO (-) DC OUTPUT TERMINAL.
8. ALL CR COMPONENTS ARE NOTED WITH KEPCO PART NUMBER.

KEPCO INC.
FLUSHING, N.Y.

TITLE: SCHEMATIC POWER SUPPLY

DRAWN	CHECKED	APPROVED	DATE
GDS	BF		8-16-64

MODEL NO. CK36-15M, CK36-15 | PART NO. | SIZE: SINGLE

DWG. NO. DMO 3036

kepco Inc.®

131-38 SANFORD AVENUE • FLUSHING, N.Y. 11352 • Phone (212) IN 1-7000
TWX# 212-539-6623 • Cable Address: KEPCOPOWER NEWYORK

#146-0045-10/63-12M